



X28/12	Airbag connector		GF00.19-P-1000-03DA
X30/4	Right voltage distributor (CAN) connector		GF00.19-P-1000-05DA
X30/5	Left voltage distributor (CAN) connector		GF00.19-P-1000-04DA
X30/6	Cockpit voltage distributor (CAN) connector		GF00.19-P-1000-03DA
X30/7	Left voltage distributor (CAN) connector		GF00.19-P-1000-04DA
X30/8	Wake-up signal connector		GF00.19-P-1000-04DA
X30/9	Circuit 15 voltage distributor		GF00.19-P-1000-04DA
X30/12	Radio 'mute' plug distributor		GF00.19-P-1000-04DA
X30/13	Circuit 58d voltage distributor		GF00.19-P-1000-04DA
X30/39	CAN-D voltage distributor connector		GF00.19-P-1000-04DA
X35/1	Left front door separation point	Connector 2, 4, 6	GF00.19-P-1000-04DA
X35/2	Right front door separation point	Plug 2	GF00.19-P-1000-05DA
X35/3	Left rear door separation point	Connector 1, 2, 4, 5, 6	GF00.19-P-1000-04DA
X35/4	Right rear door separation point	Connector 1, 2, 4, 5	GF00.19-P-1000-05DA
X35/27	PTS, cockpit warning indicator connector	Connector 1, 2	GF00.19-P-1000-04DA
X35/28	PTS, rear bumper connector		GF00.19-P-1000-06DA
X36/3	Fuel pump wiring harness connector		GF00.19-P-1000-04DA
X38	Speaker intermediate connector		GF00.19-P-1000-04DA
X39/5	Handset transmitter and receiver connector		GF00.19-P-1000-04DA
X39/37	CTEL separation point	Connector 1, 2	GF00.19-P-1000-04DA
X39/45	Walkman separation point		GF00.19-P-1000-05DA
X39/47	Armrest CTET connector	Connector 1, 2	GF00.19-P-1000-04DA
X39/48	Breakdown assistance/info button plug distributor		GF00.19-P-1000-04DA
X39/50	Fiber optic cable connector (MOST)	Can also be installed in a different location, depending on special equipment	GF00.19-P-1000-04DA
X39/57	Bluetooth module connector		GF00.19-P-1000-04DA
X55/3	Driver seat connector block	Connector 1, 12	GF00.19-P-1000-04DA
X55/4	Front passenger seat connector block		GF00.19-P-1000-05DA
X55/11	Left seat cushion ventilation motor connector		GF00.19-P-1000-04DA
X55/13	Left seat backrest ventilation motor connector		GF00.19-P-1000-04DA
X58	Trailer hitch socket (13-pin)		GF00.19-P-1000-07DA
X58/1	Interior socket		GF00.19-P-1000-05DA
X58/3	Microphone separation point		GF00.19-P-1000-07DA
X58/3	Microphone separation point	Connector 1, 2, 3	GF00.19-P-1000-07DA
X58/4	Load compartment socket		GF00.19-P-1000-06DA
X62	Rpm sensor connector (signals)		GF00.19-P-1000-01DA
X62	Rpm sensor connector (signals)	Plug 1	GF00.19-P-1000-01DA
X62/6	Right front axle multiple circuit junction connector, major assembly compartment	Connector 1, 2	GF00.19-P-1000-02DA
X62/7	Left front axle multiple circuit junction connector, major assembly compartment	Connector 1, 2	GF00.19-P-1000-01DA
X62/8	Rear axle multiple circuit junction connector		GF00.19-P-1000-07DA
X62/12	Front speed signal connector		GF00.19-P-1000-04DA
X62/32	Left rear axle multiple circuit junction connector	Connector 1, 4	GF00.19-P-1000-04DA
X62/33	Right rear axle multiple circuit junction connector		GF00.19-P-1000-05DA
X66	Rear display system intermediate connector	Plug 2	GF00.19-P-1000-04DA
X81/4	Engine wiring harness/throttle valve actuator connector	Connector 1, 2	GF00.19-P-1000-02DA
X87/6	Fuse and relay module and fanfare horn system intermediate connector		GF00.19-P-1000-01DA
X103	Through-loading feature separation point	Plug 1	GF00.19-P-1000-04DA
X137/1	VICS power supply separation point		GF00.19-P-1000-04DA
X150/1	Driver NECK-PRO head restraint solenoid separation point		GF00.19-P-1000-04DA
X150/2	Front passenger NECK-PRO head restraint solenoid separation point		GF00.19-P-1000-05DA
X205	Tumble flap/variable intake manifold switchover valves connector	M272, M273	GF00.19-P-1000-01DA
Y51x1	Left front axle damping valve unit connector		GF00.19-P-1000-01DA
Y52x1	Right front axle damping valve unit connector		GF00.19-P-1000-02DA
GF00.19-P-1000-01DA	Location and assignment of line and plug connectors, engine compartment, left		GF00.19-P-1000-01DA
GF00.19-P-1000-02DA	Location and assignment of line and plug connectors, engine compartment, right		GF00.19-P-1000-02DA
GF00.19-P-1000-03DA	Location and assignment of line and plug connectors, cockpit		GF00.19-P-1000-03DA

GF00.19-P-1000-04DA	Location and assignment of line and plug connectors, interior compartment, left		GF00.19-P-1000-04DA
GF00.19-P-1000-05DA	Location and assignment of line and plug connectors, interior compartment, right		GF00.19-P-1000-05DA
GF00.19-P-1000-06DA	Location and assignment of line and plug connectors, trunk, left		GF00.19-P-1000-06DA
GF00.19-P-1000-07DA	Location and assignment of line and plug connectors, trunk, right		GF00.19-P-1000-07DA