

Item	Designation	Coordinate
<u>A67</u>	Interior rearview mirror unit	7L
<u>A67b1</u>	Hands-free system microphone group	6L
<u>A67e1</u>	Left reading lamp	3L
<u>A67e2</u>	Right reading lamp	4L
<u>A67e3</u>	Ambient lamp	4L
<u>A67e4</u>	Garage door opener indicator lamp	9L
<u>A67h3</u>	Automatic dimming mirror	5L
<u>A67n2</u>	Garage door opener transmitter unit (---A67n2---)	7L
<u>A67s1</u>	Garage door opener pushbutton 1	8L
<u>A67s2</u>	Garage door opener pushbutton 2	8L
<u>A67s3</u>	Garage door opener pushbutton 3	9L
<u>B38/2</u>	Rain/light sensor	1L
<u>E14/1</u>	Left sun visor with illuminated mirror	12L
<u>E14/2</u>	Right sun visor with illuminated mirror	15L
<u>E15/3</u>	Left dome lamp, 3rd seat row	22L
<u>E15/3e1</u>	3rd seat row left reading lamp	23K
<u>E15/3e2</u>	3rd seat row right reading lamp	23K
<u>E15/3e3</u>	Left dome lamp, 3rd seat row	22K
<u>E15/4</u>	Central load compartment dome lamp	20L
<u>E15/12</u>	Left dome lamp, 2nd seat row	16L
<u>E15/12e1</u>	2nd seat row left reading lamp	16K
<u>E15/13</u>	Right dome lamp, 2nd seat row	18L
<u>E15/13e1</u>	2nd seat row right reading lamp	18K
<u>F4</u>	Load compartment fuse and relay box	33L
<u>F4f41</u>	Fuse 41	30L
<u>F4f42</u>	Fuse 42	31L
<u>M12</u>	Tilting/sliding roof (SR [SHD]) drive unit	26L
<u>M12b1</u>	Hall sensor 1, SR	26L
<u>M12b2</u>	Hall sensor 2, SR	26L
<u>M12m1</u>	SR motor	27L
<u>N10/8</u>	Rear SAM control module	36L
<u>N70</u>	Overhead control panel control module	4A 12A 20A 28A 37A
<u>N70e4</u>	Left interior lamp, 1st seat row	13A
<u>N70e5</u>	Right interior lamp, 1st seat row	14A
<u>N70s1</u>	Roof switch	5A
<u>N70s2</u>	Rear dome lamp switch	6A
<u>N70s3</u>	Door contact ON and OFF switch	7A
<u>N70s4</u>	Interior lamp switch, 1st seat row	8A
<u>N70s6</u>	Left reading lamp switch, 1st seat row	9A
<u>N70s7</u>	Right reading lamp switch, 1st seat row	10A

<u>S101</u>	Left front vanity mirror illumination switch	11L
<u>S102</u>	Right front vanity mirror illumination switch	14L
<u>U656</u>	Valid for interior light package	21A
<u>U861</u>	Valid for versions without interior light package	19A
<u>U904</u>	Wiring harness installed but nonfunctional	38A
<u>W48/3</u>	Ground (headliner supply)	33E
<u>X18/2</u>	Interior/roof connector	35H