


MODEL 169.0 /3, 245.2 as of 3.6.08
 with CODE (220) Parktronic system (PTS)
 with CODE (235) Active Park Assist
 MODEL 169.0 /3, 245.2
 with CODE (809) Model year 2009
 with CODE (220) Parktronic system (PTS)
 with CODE (235) Active Park Assist

Shown on model 169.0

- 1 Front bumper
- 2 Electrical connector
- 3 Bracket

- B8/1 Outer left front PTS ultrasonic sensor
- B8/2 Center left front PTS ultrasonic sensor
- B8/3 Inner left front PTS ultrasonic sensor
- B8/4 Inner right front PTS ultrasonic sensor

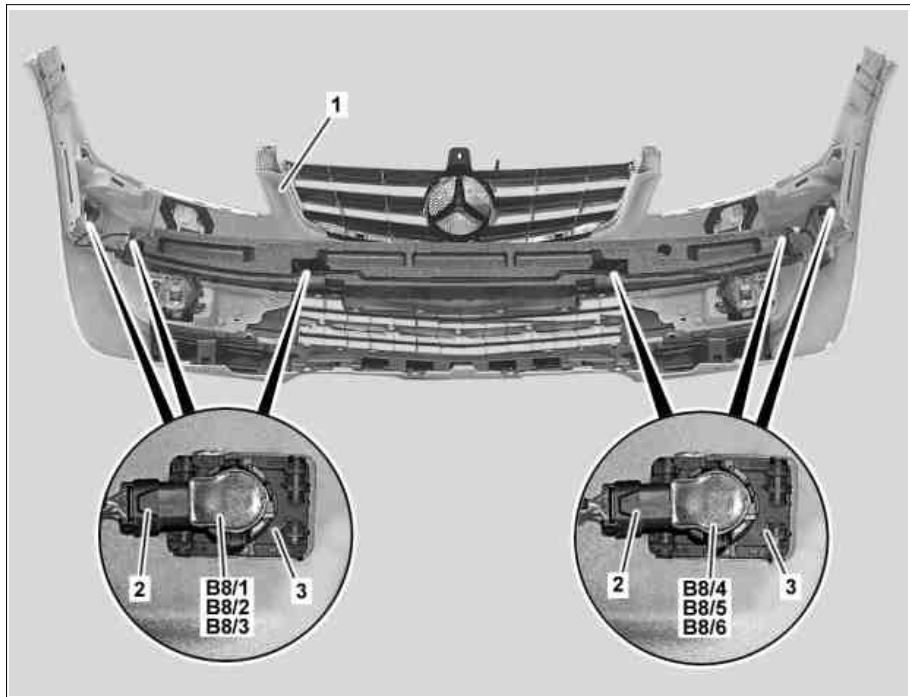

P54.65-3661-06

- B8/5 Center right front PTS ultrasonic sensor
- B8/6 Outer right front PTS ultrasonic sensor

☒ ☒	Remove/install		
1	Detach front section of fender liner far enough so that outer left front PTS ultrasonic sensor (B8/1) or outer right front PTS ultrasonic sensor (B8/6) is accessible	If the outer left front PTS ultrasonic sensor (B8/1) or outer right front PTS ultrasonic sensor (B8/6) is to be removed separately.	
2	Unclip outer left front PTS ultrasonic sensor (B8/1) or outer right front PTS ultrasonic sensor (B8/6) from bracket (3) and disconnect electrical connector (2)	If the outer left front PTS ultrasonic sensor (B8/1) or outer right front PTS ultrasonic sensor (B8/6) is to be removed separately. i Installation: Ensure that electrical connector (2) is seated properly.	
3	Check Parktronic system (PTS) for proper function	If the outer left front PTS ultrasonic sensor (B8/1) or outer right front PTS ultrasonic sensor (B8/6) is to be removed separately. i Switch off ignition, PTS control unit performs self-test automatically	
4	Remove front bumper (1).	If the center left front PTS ultrasonic sensor (B8/2), inner left front PTS ultrasonic sensor (B8/3), inner right front PTS ultrasonic sensor (B8/4) or center right front PTS ultrasonic sensor (B8/5) is to be removed. Model 169.0/3 Model 245.2	AR88.20-P-2000AK AR88.20-P-2000BK
5	Unclip center left front PTS ultrasonic sensor (B8/2), inner left front PTS ultrasonic sensor (B8/3), inner right front PTS ultrasonic sensor (B8/4) or center right front PTS ultrasonic sensor (B8/5) from bracket (3) and disconnect electrical connector (2)	If the center left front PTS ultrasonic sensor (B8/2), inner left front PTS ultrasonic sensor (B8/3), inner right front PTS ultrasonic sensor (B8/4) or center right front PTS ultrasonic sensor (B8/5) is to be removed. i Installation: Ensure that electrical connector (2) is seated properly.	
6	Install in the reverse order		