



**Model 205.4**  
up to model year 2019  
with code 360 (HERMES UMTS)

**Model 205.4**  
up to model year 2019  
with code 362 (HERMES LTE)

1 Nut  
N112/9 HERMES control unit



P82.95-3231-06

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1	Commission HERMES control unit (N112/9).	When replacing the HERMES control unit (N112/9).	AD00.00-P-2000-04B
	2	Switch off ignition and store transmitter key outside of transmission range (min. 2 m).	
	3	Remove trim in trunk on right side.	AR68.30-P-4800LWR
	4	Unscrew nut (1).	
	5	Remove HERMES control unit (N112/9) and disconnect its electrical connectors.	
	6	Install in the reverse order.	