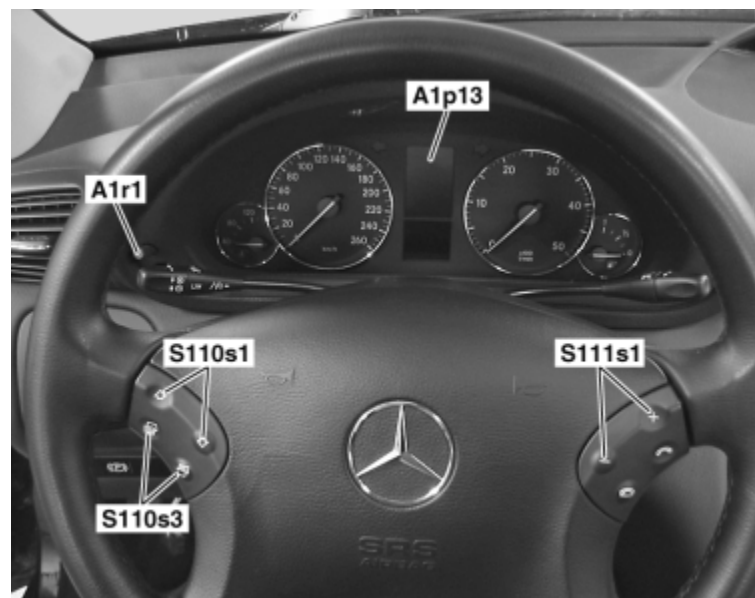


AP00.20-P-0042PIT

Reset service indicator

23.2.06

MODEL 203*A1p13 Multifunction display**A1r1 Instrument illumination rheostat (model 203)**A1r1 Instrument illumination rheostat and reset button (model 209)**S110s1 Scroll forward/back button**S110s3 System selection button**S111s1 Buttons + and - for setting specific functions and volume control*

P54.30-9423-11

	Adjust	
1	Turn key in ignition switch to position "1".	
2	Press system selection button (S110s3) repeatedly until the basic display "Kilometer reading" is shown in the multifunction display (A1p13)	
3	Press variable resistor or dimmer (A1r1) 3 times briefly	i An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).
4	Turn key in ignition switch to position "2".	
5	Press lower scroll forward/back button (S110s1)	i The "Service display" appears in the multifunction display (A1p13).

6	Press variable resistor or dimmer (A1r1) once briefly	i The menu "Oil type" for selecting the specification of the engine oil used appears in the multifunction display (A1p13).
7	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	i The selection option may vary depending on the engine: "Standard", "Qual. 229.3" or "Qual. 229.5".
8	Press top scroll forward/back button (S110s1) for confirmation	i "Confirm oil reset, press R button for 3 s) appears in the multifunction display (A1p13) .
9	Keep variable resistor or dimmer (A1r1) pressed for 3 s	i "Service confirmed" appears in the multifunction display (A1p13).
10	Press top scroll forward/back button (S110s1)	i The "Service display" appears in the multifunction display (A1p13).
11	Press top system selection button (S110s3)	i The basic display "Kilometer reading" appears in the multifunction display (A1p13).
12	Turn key in ignition switch to position "0".	