

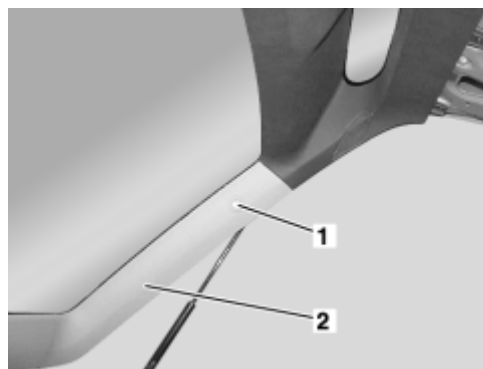
AR68.30-P-1080PB

Removing and installing inner paneling from rear window

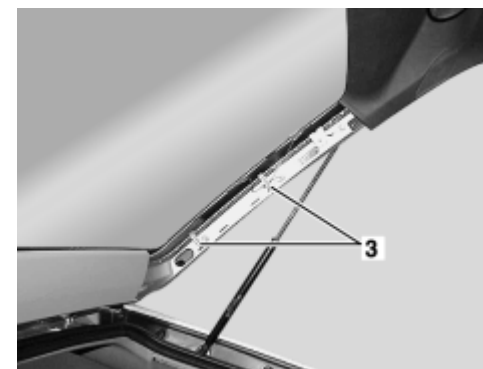
29.5.00

**MODEL 203.7**

- 1 Supports
- 2 Side paneling
- 3 Retaining clips



P68.30-2278-01

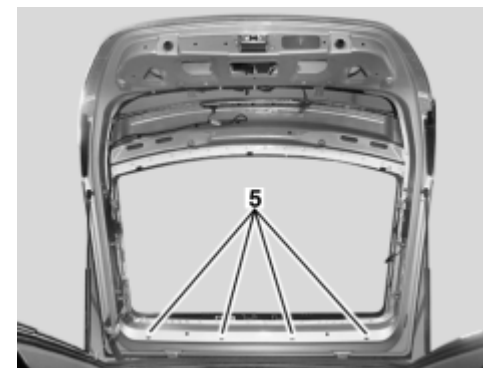


P68.30-2279-01



 
- 2 Side paneling
- 4 Paneling on upper window frame
- 5 Upper retaining clips

 

 


P68.30-2305-01



P68.30-2306-01

	<b>Removing, installing</b>	
1	Unscrew mounts (1) for pull cables on rear shelf	
2	Loosen side paneling (2) from retaining clips (3)	 Left and right.
3	Remove side paneling (2)	 Left and right.

4	Loosen paneling on upper window frame (4) from retaining clips at top (5)	 Unclip paneling from bottom.
5	Remove paneling from upper window frame (4)	 Do not break off plastic lugs on inside  Remove paneling upward
6	Install in the reverse order	