


Ignition Networking

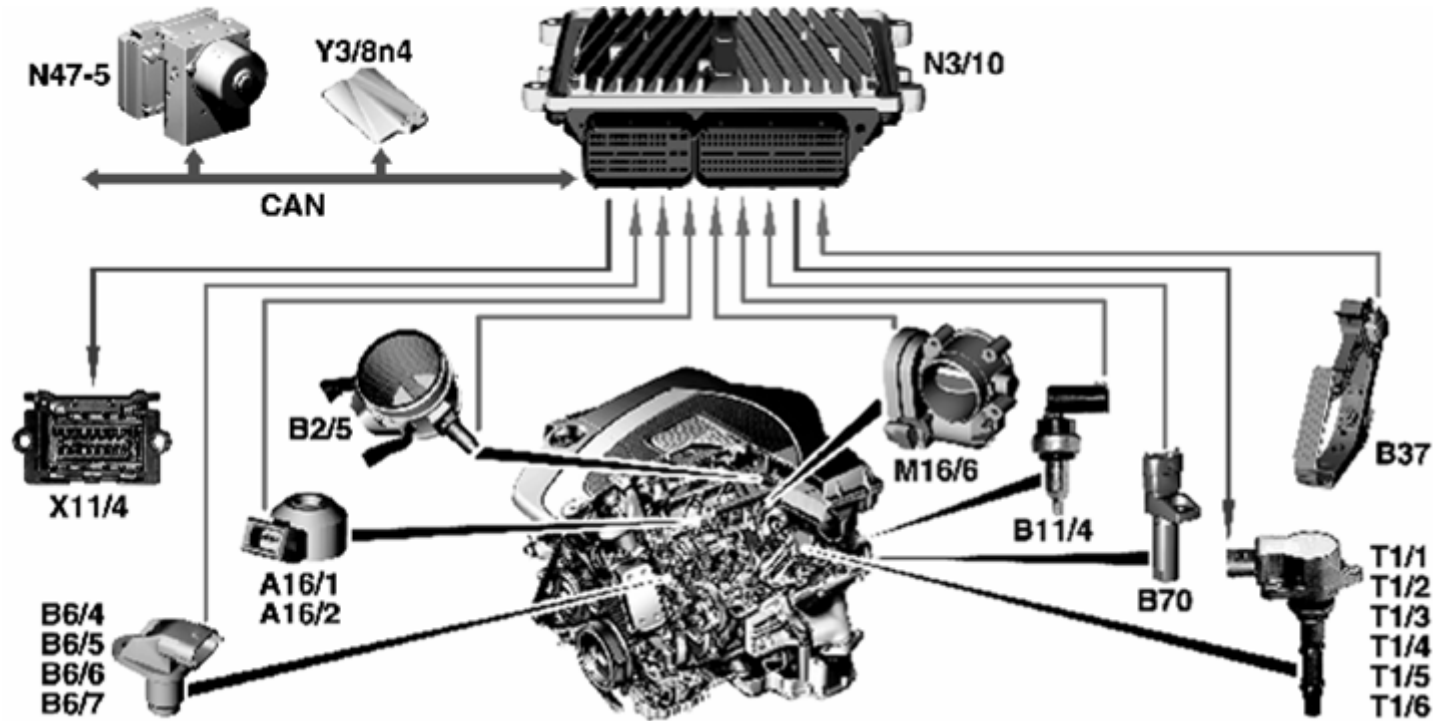

A16/1 – Right knock sensor
 A16/2 – Left knock sensor
 B6/4 – Left intake camshaft hall sensor
 B6/5 – Right intake camshaft hall sensor
 B6/6 – Left exhaust camshaft hall sensor
 B6/7 – Right exhaust camshaft hall sensor
 B2/5 – Hot film mass airflow sensor
 B11/4 – Coolant temperature sensor
 B70 – Crankshaft hall sensor

B37 – Accelerator pedal sensor
 M16/6 – Throttle valve actuator
 N3/10 – ME 9.7
 N47-5 – ESP and BAS control unit
 T1/1 through T1/6 – ignition coil for cylinders 1 to 6
 Y3/8n4 - Fully integrated transmission control (VGS) control unit
 X11/4 – Data link connector