


TRANSMISSION 722.6 in MODEL 203, 209.3 /4

TRANSMISSION 722.9 in MODEL 203.052 /054 /056 /252 /254 /256 /752 /756, 209.354 /356 /372 /375 /376 /377 /454 /456 /472 /475 /476 /477

Illustrated on model 203

- 1 Ignition lock control cable
- 1b Retaining lug
- 1c Clutch
- 4 Screw
- 5 Electrical connector

- N15/5 Electronic selector lever module control unit

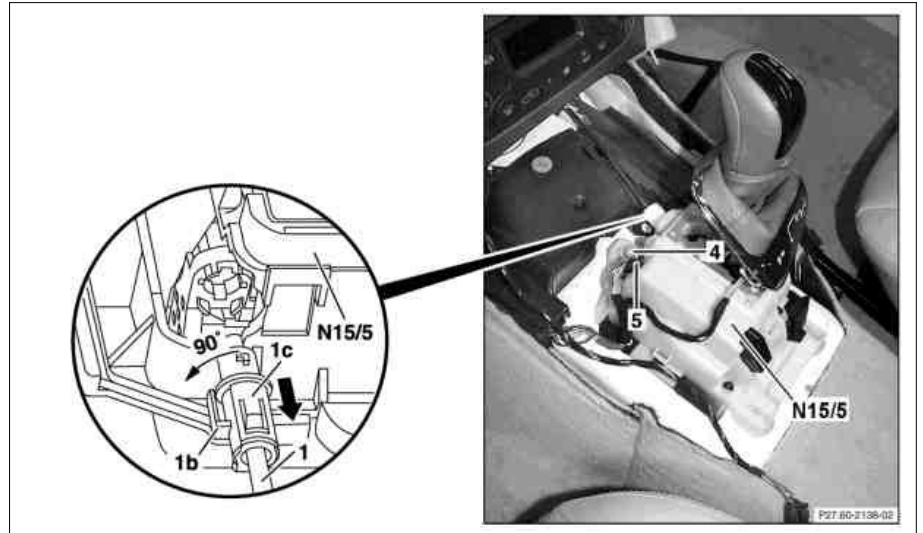

P27.60-2139-05

Modification notes

6.8.09	Locking plate of shift rod on intermediate lever modified	BT27.60-P-0021-01A
--------	---	--------------------

	Remove/install		
	Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.
1	Raise vehicle with vehicle lift		AR00.60-P-1000P
2	Unhook shift rod from intermediate lever from below	Observe variant of locking plate.	AR27.60-P-0905P
	Locking plate of shift rod on intermediate lever modified		BT27.60-P-0021-01A
3	Lower vehicle with lifting platform		AR27.60-P-0905PA
4	Remove selector lever handle with covering	Model 203, 209.3 with mechanism 722.6 up to 30.4.02 Model 203, 209.3 with mechanism 722.6 from 1.5.02 Model 209.4 with transmission 722.6 Model 203, 209 with transmission 722.9	AR68.20-P-2000P AR68.20-P-2000Q AR68.20-P-2000QBS
5	Remove center console	Model 203 Model 209 without code P98 Black Series Model 209 with code P98 Black Series	AR68.20-P-2000P AR68.20-P-2000Q AR68.20-P-2000QBS
6	Detach ignition switch control cable (1) at electronic selector lever module control unit (N15/5).	Compress the retaining lug (1b) and press the coupling (1c) against the spring force into the electronic selector lever module control unit (N15/5), twist 90° (to the right or left) and detach cable of ignition switch (1).	
7	Unscrew bolt (4)		*BA27.60-P-1001-02A
8	Disconnect electrical connector (5)		
9	Remove electronic selector lever module control unit (N15/5)		
10	Install in the reverse order		
11	Adjusting shift rod		AR27.60-P-0980P
12	Connect STAR DIAGNOSIS, read out and erase fault memory		

Tightening torques for floor shift

Number	Designation	Trans- mission 722.6	Trans- mission 722.9

BA27.60-P-1001-02A	Bolt, floor selector to body	Nm	6	6
--------------------	------------------------------	----	---	---