

ENGINE 271

in MODEL 203.7## #E as of 36504,
 203.### #A as of 937299,
 203.### #F as of 865761,
 203.### #R as of 251004

ENGINE 272.920 /940 /941


in MODEL 203.### #A as of 937299,
 203.### #F as of 865761,
 203.### #R as of 251004

ENGINE 272.960 /970

in MODEL 203.### #A as of 817658,
 203.### #F as of 721472,
 203.### #R as of 186467

ENGINE 272 in MODEL 203.7## #E

55/2 Fuel filter

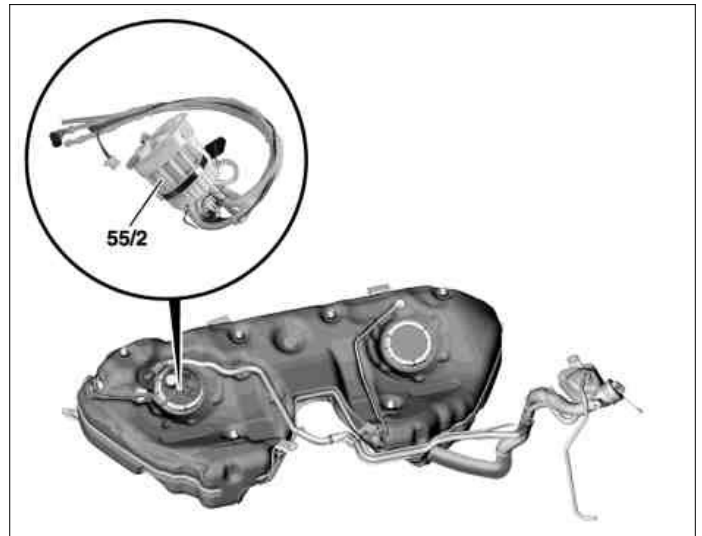

P47.20-2233-11

	<p>Remove/install</p>		
<p>⚠ Danger!</p>	<p>Risk of explosion caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel and risk of injury to eyes and skin caused by contact with fuel</p>	<p>No fire, sparks, open flames or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.</p>	<p>AS47.00-Z-0001-01A</p>
<p>1 </p>	<p>Remove fuel filter (55/2)</p>	<p>See: ↓ Remove/install fuel level sensor. Replace fuel filter (55/2), do not clean.</p>	<p>AR47.10-P-7000PR</p>
<p>2</p>	<p>Install in the reverse order</p>		