

ENGINE 111.951 /955 /981, 112.912 /916 /946 /953 /955 /961, 271.921 /940 /942 /946 /948 /955

ENGINE 113.987

in MODEL 209.376 ## up to 96471,

209.476 ## up to 28354


ENGINE 113.987

in MODEL 209.376 ## up to 54399,

209.476 ## up to 6709 with CODE (494) USA version


Illustrated on Model 203.0

- 1 Shield
- 2 Bolt
- 3 Fuel lines
- 4 Hose clamps
- 5 Fuel filter

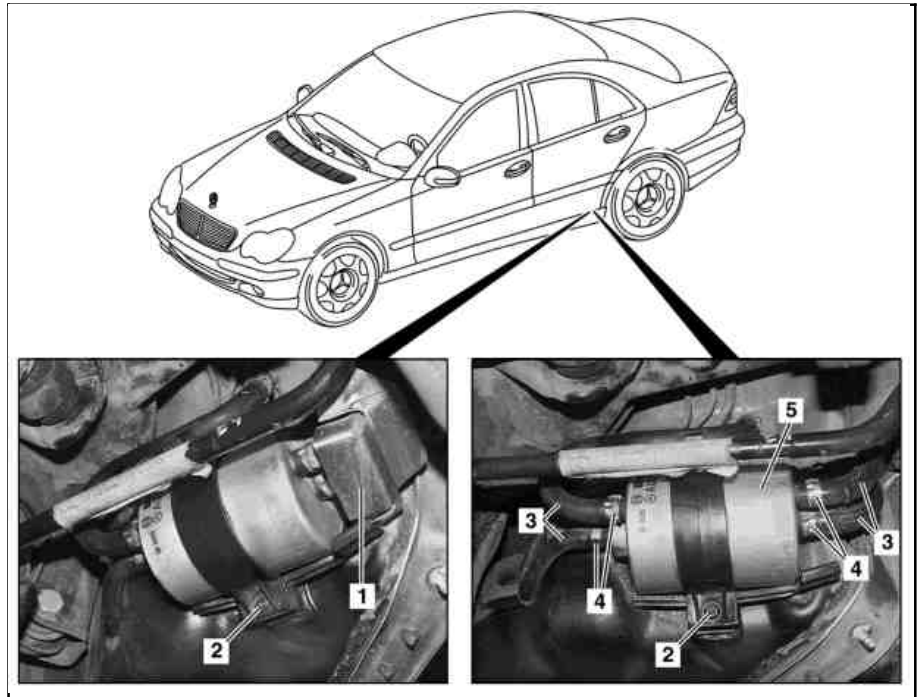

P47.20-2049-06

☒ ☒	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates below the hoist support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
⚠ Danger!	Risk of explosion caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel.	No fire, sparks, open flames or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Release vacuum in fuel tank	i Open cap	
2	Partially detach floor covering at rear left	i Until fuel filter (5) is accessible.	
3	Remove shield (1)		
4	Unscrew bolt (2).		
5	Pinch off fuel lines (3)	☒ Clamping device	*000589403700
6	Remove hose clamps (4)	i Installation: Replace hose clamps (4).	
7	Disconnect fuel lines (3) from fuel filter (5)	i Installation: Do not interchange the fuel lines (3).	
8	Replace fuel filter (5)		
9	Install in the reverse order		
⚠ Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near engine	Secure vehicle to prevent it from moving. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
10	Start engine		
11	Inspect fuel system for leaks		

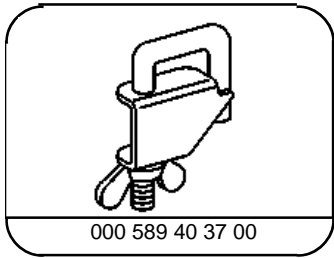

000 589 40 37 00

Clamping device