
	Relay assignment of fuse and relay box in engine compartment, left	Model 203	li€rGF
--	--	-----------	--------

Relay assignment N10/1 Front SAM control unit with fuse and relay module I to S Plug positions

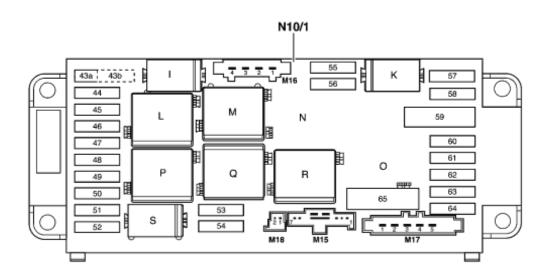

P54.15-2205-06

Bay	Designation
I	Fanfare horn system relay (N10/1kI)
К	Terminal 87 relay, chassis (N10/1kK)
L	Wiper speed 1 and 2 relay (N10/1kL)
М	Terminal 15R relay (N10/1kM)
N	SEQ [ASG] pump control relay (N10/1kN) (with code (424) Sequentronic automated manual transmission (ASG))
0	Air pump relay (N10/1kO) (engines 112, 113, 271 only)

Р	Terminal 15 relay (N10/1kP)
Q	Wiper ON/OFF relay (N10/1kQ)
R	Terminal 87 relay, engine (N10/1kR)
S	Starter relay (N10/1kS)