


AR07.03-P-6520A	Remove/install injection valves (ME-SFI)	4.12.06
ENGINE	112.910 in MODEL 202.026 /086	
ENGINE	112.920 in MODEL 202.089 /029	
ENGINE	112.921 in MODEL 210.081 /281 /063 /263	
ENGINE	112.922 in MODEL 220.063 /163	
ENGINE	112.923 in MODEL 129.059	
ENGINE	112.940 in MODEL 208.365 /465	
ENGINE	112.941 in MODEL 210.282 /065 /082 /265	
ENGINE	112.942 in MODEL 163.154	
ENGINE	112.943 in MODEL 129.064	
ENGINE	112.944 in MODEL 220.165 /065	
ENGINE	113.940 in MODEL 210.070 /270	
ENGINE	113.941 in MODEL 220.070 /170	
ENGINE	113.960 in MODEL 215.375, 220.075 /175	
ENGINE	113.961 in MODEL 129.068	
ENGINE	112.945, 113.962 /982 in MODEL 463	
ENGINE	113.980 in MODEL 210.074 /274	
ENGINE	113.944 in MODEL 202.033 /093	
ENGINE	113.942 in MODEL 163.172	
ENGINE	113.943 in MODEL 208.370 /470	
ENGINE	113.984 in MODEL 208.374	
ENGINE	113.981 in MODEL 163.174	
ENGINE	112.912 in MODEL 203.061 /261, 209.361 /461	
ENGINE	112.946 in MODEL 203.064 /264	
ENGINE	112.947 in MODEL 170.465	
ENGINE	112.960 in MODEL 170.466	
ENGINE	112.961 in MODEL 203.065 /265	
ENGINE	113.963 in MODEL 230.475	
ENGINE	113.968 in MODEL 209.375 /475	
ENGINE	112.913 in MODEL 211.061 /261	
ENGINE	112.949 in MODEL 211.065 /265	
ENGINE	113.967 in MODEL 211.070 /270	
ENGINE	113.992 in MODEL 230.474	
ENGINE	113.987 in MODEL 209.376 /476	
ENGINE	112.955 in MODEL 209.365 /465	
ENGINE	112.916 in MODEL 203.081 /281	
ENGINE	112.953 in MODEL 203.084 /284	
ENGINE	112.970 in MODEL 163.157	
ENGINE	113.965 in MODEL 163.175	
ENGINE	113.990 in MODEL 211.076 /276	
ENGINE	113.991 in MODEL 215.374, 220.074 /174	
ENGINE	112.973 in MODEL 230.467	
ENGINE	112.972 in MODEL 220.067 /167	
ENGINE	112.975 in MODEL 220.087 /187	
ENGINE	113.948 in MODEL 220.083 /183	
ENGINE	113.966 in MODEL 220.084 /184	
ENGINE	112.917 in MODEL 211.080 /280	
ENGINE	112.954 in MODEL 211.082 /282	
ENGINE	113.969 in MODEL 211.083 /283	
ENGINE	113.988 in MODEL 203.076 /276	
ENGINE	113.989 in MODEL 171.473	
ENGINE	113.995 in MODEL 230.472	

**Shown on engine 112**

16/7    *Anti-twist lock*  
 17      *Fuel distributor*

## Y62 Fuel injection valves

*Arrow: Square catch*

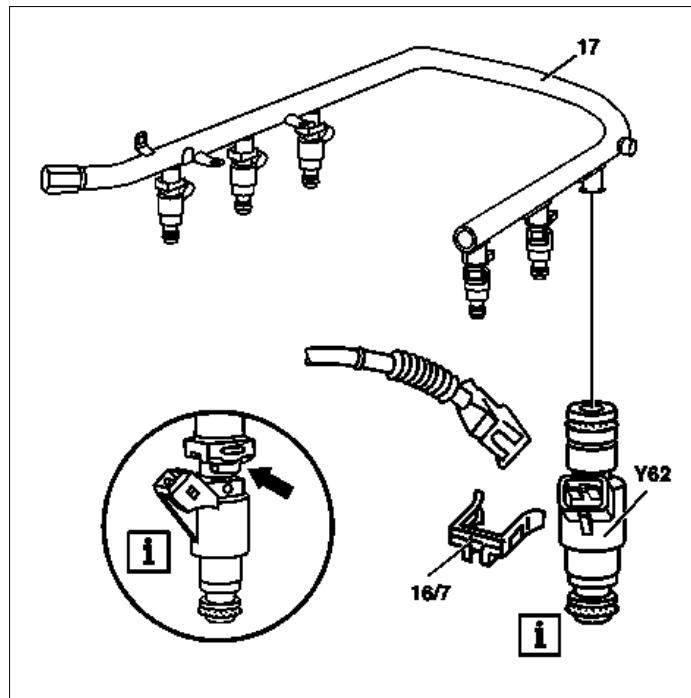

P07.40-0218-12

	Remove/install		
1	<p>Remove fuel distributor (17) together with the fuel injectors (Y62)</p> <p>Model 129.059/ 064/ 068            Model 163.154/ 157 / 172/ 174/ 175            Model 202.026/ 029/ 033/ 086/ 089/ 093            Model 208.365 /370 /374 /465 /470            Model 210.063 /065 /070 /074 /081 /082 /263 /265 /270 /274 /281 /282            Model 170.465 /466            Model 171.473            Model 203.061 /261 /064 /065 /076 /081 /084 /264 /265 /276 /281 /284            Model 209            Model 211.061 / 065 / 070 / 076 / 080 / 082 / 083 / 261 / 265 / 270 / 276 / 280 / 282 / 283            Model 215.374/ 375            Model 220.063 /065 /067 /070 /074 /075 /083 /084 /087 /163 /165 /167 /170 /174 /175 /183 /184 /187            Model 230            Engine 112.945, 113.962 in model 463            Engine 113.982 in model 463.241 /243 /246</p> <p> Check O-rings for damage otherwise this can lead to leakage. Before installing fuel injection valves (Y62) lubricate O-rings.</p> <p> Anti-twist locks (16/7) must latch into the square catch (arrow) of the fuel injection valves (Y62).</p>	AR07.03-P-1451A  AR07.03-P-1451AA  AR07.03-P-1451AG	
2	Install in the reverse order		