


DOOR HANDLE REMOVAL

Step 1: (Start with the driver side) Peel off about 2 pins from the **door** weather strip to reveal the access hole. Then use a T-20 torx driver to release the screw that holds the IR receiver piece - **WARNING**: do NOT immediately remove the screwdriver as the screw may fall off!



Step 2: Use masking tape to hold the screwdriver in place, so that you can continue the process without worrying the screw falling off.

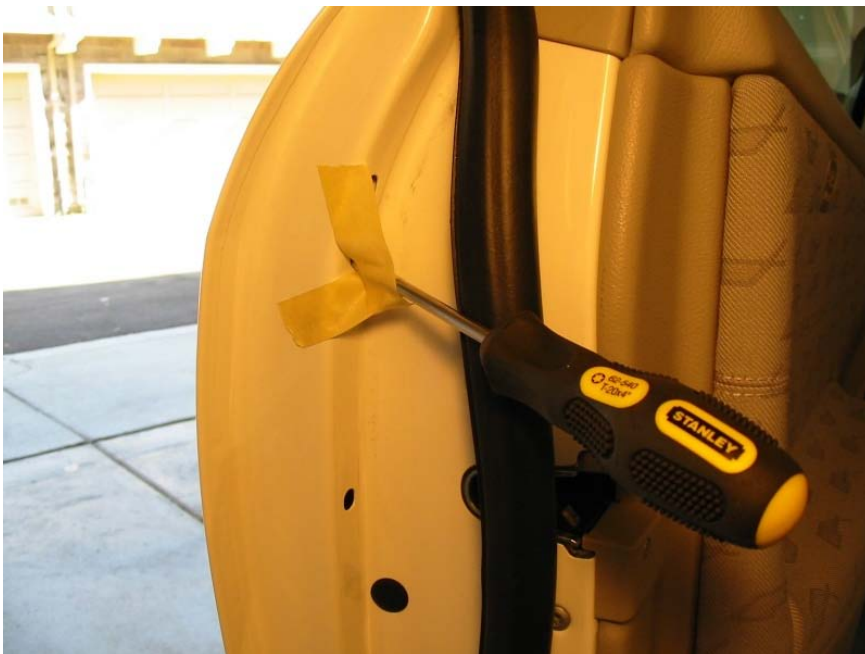


Step 3: Carefully pull out the IR sensor/lock assembly and unclip the sensor.



Step 4: Hold the screwdriver, and tape the tail of the screw to secure it. Now you can remove the screwdriver. Then slide the **door handle** out in the order shown.



Step 5: Slightly pry the 3 hooks of the cap to remove the the lock and IR sensor.

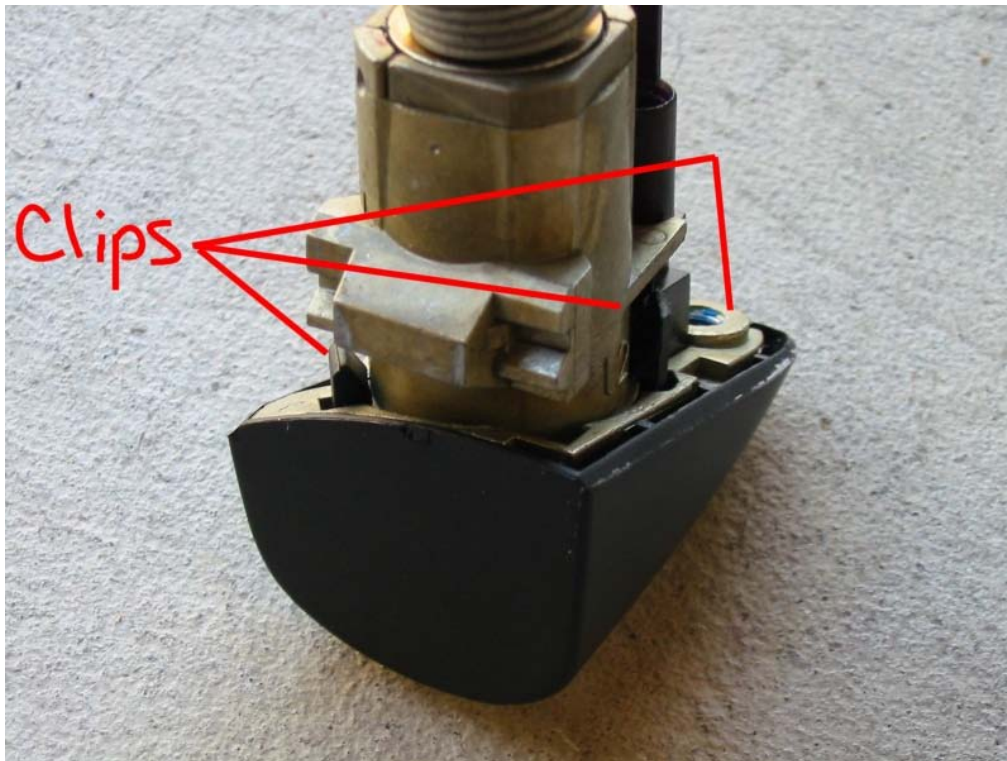

Step 6: IR sensor/lock cap removed.



Step 7: (Passanger side) Repeat the procedures to remove the IR sensor assembly and the **handle** piece. Remember to tape the tail of the fastening screw first before removing the screwdriver!



Step 8: There is no lock on the passanger side. Use a flat head screwdriver to pry off the spring holding the IR sensor to the cap.



