

The coolant level must reach on a cold engine up to the marking (arrow) on the coolant expansion reservoir.

i When coolant is warm: approx. 1 cm above this scribe mark.

Shown on model 203 with engine 112



P20.00-2059-01