
AP15.10-P-1580P	Replace spark plugs	5.2.04
-----------------	---------------------	--------

ENGINE 271.948

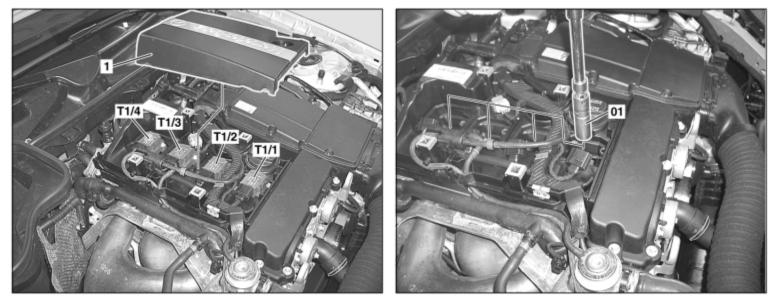

P15.10-2111-08

01 Spark plug wrench 1 Engine cover T1/1 Cylinder 1 ignition coil T1/2 Cylinder 2 ignition coil T1/3 Cylinder 3 ignition coil T1/4 Cylinder 4 ignition coil

Modification notes


21.4.04	Value changed from 25 Nm to 28 Nm	Value in series 1001 modified on engine 271	BA15.10-P-1001-01C
---------	-----------------------------------	---	--------------------

	Remove/Install		
⚠ Danger!	Risk of death caused by contact with parts conducting high voltages.	Do not touch parts which conduct high voltages. Persons who wear electronic implants (e.g. heart pacemakers) must not carry work out on the ignition	<u>AS15.10-Z-0001-01A</u>

		system	
⚠ Danger!	Risk of injury to skin and eyes from handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	<u>AS00.00-Z-0002-01A</u>
۲	Notes on avoiding damage to ignition system		<u>AH15.10-P-0002-01D</u>
1	Remove ignition coils of cylinders 1 to 4 (T1/1 to T1/4)		
li≆"AR	Remove/install ignition coils	Engine 271.948	AR15.12-P-2003T
2	Replace ignition coil connector		<u>AP15.10-P-1580-01P</u>
3	Unscrew spark plugs from cylinder head with S spark plug wrench (01)	Spark plug wrench	<u>112 589 01 09 00</u>
		Nm	BA15.10-P-1001-01C
4	Install in the reverse order		

Nm Spark plugs

Number	mber Designation		Engine 271
BA15.10-P-1001-01C	Spark plug at the cylinder head	Nm	28

 

112 589 01 09 00

Spark plug wrench