



- Inner piece removed from top of cupholder (both pieces are on their sides).
- Plastic clips in circle in smaller holder (A) lock into circle in the top part (B). In mine, these plastic clips are what connects the inner part to the cupholder top.  
(The two spring loaded tabs on the bottom left and right hand side of side of the main cup holder (C & D) are only connected to the chrome "open" button on top of the cup holder and do not need to be depressed in order to remove the inner piece.)