
AR33.15-P-0161P Page 1 of 3

| AR33.15-P-0161P | Removing and installing cross strut on front axle | 8.11.99 | |
|-----------------|---|---------|--|
|-----------------|---|---------|--|

MODEL 203 (except 203.081 /084 /087 /092 /281 /284)

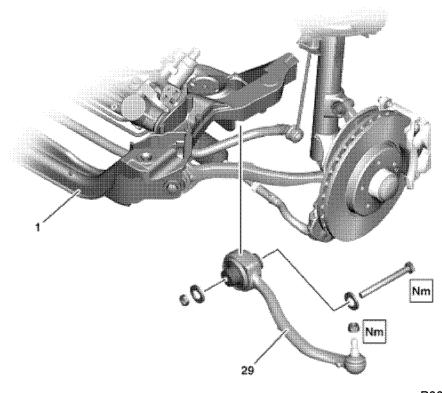

P33.20-2030-06

Modification notes

| 15.3.04 The vehicle must have a chassis alignment check after installing the cross strut | Step 9 | |
|--|--------|--|
|--|--------|--|

| 3 x | Remove/install | | |
|------------|----------------|---|--------------------|
| ⚠ Danger! | | Align vehicle between the columns of the lifting platform and position the four | AS00.00-Z-0010-01A |

| | platform. | support plates at the lifting platform support points specified by the vehicle manufacturer. | |
|-------|--|--|--------------------|
| (1) | Notes on self-locking nuts and bolts | All models | AH00.00-N-0001-01A |
| 1 | Raise vehicle. | | AR00.60-P-1000P |
| 2 | Remove front wheel | | |
| l≆ AP | Remove/install wheels, rotate if necessary | | AP40.10-P-4050Z |
| 3 | Detach cross strut (29) from steering knuckle | Use a suitable drift punch to drive the ball pin from the steering knuckle assembly. | |
| | | Hm | BA33.20-P-1005-01E |
| 4 | Unscrew the bolt of the cross strut (29) at the front axle carrier (1) | Nm | BA33.20-P-1006-01E |
| 5 | Remove transverse link (29). | Loosen cross strut (29) from the front axle carrier (1) using an assembly lever. | |
| 4 | Check | | |
| 6 | Inspect transverse link (29) for visible signs of damage of deformation. | i On accident vehicles: ↓ | |
| | | Measure cross strut (29). | |
| 7 | Check rubber bushing in transverse link (29). | i To replace damaged rubber mount, refer to:↓ | |
| | | Rubber bushing in transverse link, removal and installation | AR33.15-P-0161-01P |
| | | S Extraction and insertion tool | 220 589 06 43 00 |
| | | Workshop press | WE58.40-Z-1001-12A |
| 8 | Install in the reverse order | | |
| 9 | Perform chassis alignment | | AR40.20-P-0200P |

AR33.15-P-0161P Page 3 of 3

Nm Wheel control, hub

| Number | | | Models 203 except models 203.081/084/ 087/092/281/284 | |
|--------------------|--|-----------|---|-----|
| BA33.20-P-1005-01E | Self-locking nut, transverse link to steering knuckle assembly | 1st stage | Nm | 80 |
| | | 2nd stage | 4° | - |
| BA33.20-P-1006-01E | Self-locking nut for cross strut on front axle carrier | | Nm | 150 |



220 589 06 43 00

Extraction and press-in tools

Workshop equipment/MB testers (see Workshop Equipment Manual)

| WE58 40-7-1001-12A | Stationary workshop press 65t, e.g. Matra-Werke GmbH, D-60314 Frankfurt/Main, Germany |
|-----------------------|---|
| WILOU. 40 Z 1001 12/1 | Otationary workshop press set, e.g. matta worke embri, b see 14 i ranklarimain, cermany |