


## Controls in detail

### Locking and unlocking

#### Factory setting

#### Global unlocking


- ▶ Press button .

All turn signal lamps flash once. The locking knobs in the doors move up. The anti-theft alarm system\* is disarmed.

The vehicle will lock again automatically and reactivate the anti-theft alarm system\* within approximately 40 seconds of unlocking if:


- neither a door nor the trunk is opened
- the SmartKey is not inserted in the starter switch
- the central locking switch is not activated



#### Global locking

- ▶ Press button .

With the hood, trunk and all doors closed, all turn signal lamps flash three times. The locking knobs in the doors move down. The anti-theft alarm system\* is armed.

#### Selective setting

If you frequently travel alone, you may wish to reprogram the SmartKey so that pressing  only unlocks the driver's door and the fuel filler flap.

- ▶ Press and hold buttons  and  simultaneously for about 5 seconds.

Battery check lamp  flashes twice.

The SmartKey will then function as follows:

#### Unlocking driver's door and fuel filler flap

- ▶ Press button  once.


All turn signal lamps flash once. The locking knob in the driver's door moves up. The anti-theft alarm system\* is disarmed.

#### Global unlocking

- ▶ Press button  twice.




All turn signal lamps flash once. The locking knobs in the doors move up. The anti-theft alarm system\* is disarmed.

**Global locking**

- ▶ Press button .

With the trunk and all doors closed, all turn signal lamps flash three times. The locking knobs in the doors move down. The anti-theft alarm system\* is armed.

**Restoring to factory setting**

- ▶ Press and hold buttons  and  simultaneously for about 6 seconds until battery check lamp  flashes twice. The SmartKey is set to factory setting again.

**!**


If you can no longer lock or unlock the vehicle with the SmartKey, then either the batteries in the SmartKey are discharged, the SmartKey is malfunctioning or the vehicle battery is drained.

- Check the batteries in the SmartKey (▷ page 101) and replace them if necessary (▷ page 396).
- Use the mechanical key to unlock the driver's door (▷ page 389) and the trunk (▷ page 390).
- Use the mechanical key to lock the driver's door (▷ page 390) and the trunk (▷ page 106).
- Have the vehicle battery and the battery connections checked (▷ page 412).


If the SmartKey is malfunctioning, contact an authorized Mercedes-Benz Center.

**Checking the batteries**

- ▶ Press button  or .

Battery check lamp  comes on briefly to indicate that the SmartKey batteries are in order.



**i**

If battery check lamp  does not come on briefly during check, then the SmartKey batteries are discharged.

Replace the batteries (▷ page 396).

You can obtain the required batteries at any authorized Mercedes-Benz Center.

**i**

If the batteries are checked within signal range of the vehicle, pressing the  or  button will lock or unlock the vehicle accordingly.