

AR26.60-P-0610-11A

Detaching and attaching shift lever

TRANSMISSION 716.6

Remove

1 Release gaiter (2) from center console trim panel and turn inside out over the shift lever handle (1).

2 Loosen clamp (3) by turning counterclockwise (arrow A).


3 Pull shift lever handle (1) upward from shift lever (4).

Mounting

4 Push shift lever handle (1) with gaiter (2) onto shift lever (4).

5 Tighten clamp (3) by turning clockwise (arrow B).

6 Fix gaiter (2) to the center console cover.

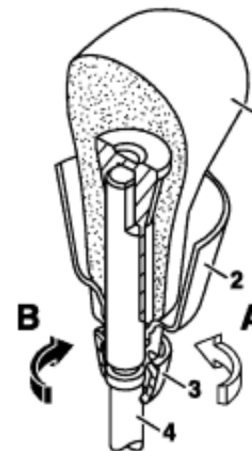

P26.60-0266-02