


P43.10-2017-09

2 Rail

- N3/9 CDI control unit
- N3/10 ME-SFI [ME] control unit
- N10/1 Front SAM control unit with fuse and relay module

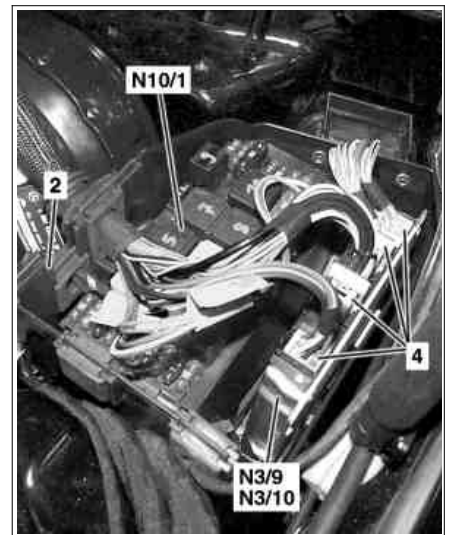

P07.08-2087-02

☒ ☒	Remove/install		
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
⚠ Danger!	Risk of poisoning caused by swallowing brake fluid. Risk of injury caused by brake fluid coming into contact with skin and eyes.	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
ⓘ	Notes on handling brake fluid		AH42.50-P-0001-01A
ⓘ	Notes on repairs to brake system		AH42.00-P-0003-01A
ⓘ	Notes on externally invisible brake fluid loss		AH42.10-P-9406-02A
1	Remove wiper system		AR82.30-P-6400P
2	Remove master brake cylinder (1).	☑ Check brake master cylinder for leaks at rear of thrust rod piston.	AR42.10-P-0310P
3	Unplug diaphragm travel sensor connector (A77x1) from BAS diaphragm travel sensor (A77b1)		
4	Detach connector from BAS release switch (A77s1)		

5	Disconnect vacuum line (8) from brake booster (16)	i Operate brake pedal several times until vacuum in brake booster is reduced.	
6.1	Pull out CDI control unit (N3/9) and put to one side	Engine 611, 612, 646 i Do not detach any connectors.	AR07.08-P-7008P
6.2	Pull out ME-SFI [ME] control unit (N3/10) and put to one side	Engines 111, 112, 113, 156 i Do not detach any connectors.	AR07.08-P-7008P
7	Remove bolts on front SAM control unit with fuse and relay module (N10/1)		
8	Unlock and pull out rail (2) on module box		
9	Remove mechanical stop lamp switch	Model 203	AR42.10-P-0040P
10	Remove cover above pedal assembly		
11	Detach locking device (25) on brake booster to brake pedal		
12	Remove pin (26)		
13	Unscrew retaining nuts (23) for brake booster	Nm	*BA43.10-P-1002-01A
14	Remove brake booster (16)	i Do not damage rubber boot when removing and installing the brake booster. i Installation: Replace gasket (21) if necessary.	
15	Install in the reverse order		

****Nm** Pneumatic brake booster**

Number	Designation		Model 203	Model 209
BA43.10-P-1002-01A	Nut, brake booster carrier to front end	Nm	20	20