



116 589 20 33 00

Impact extractor

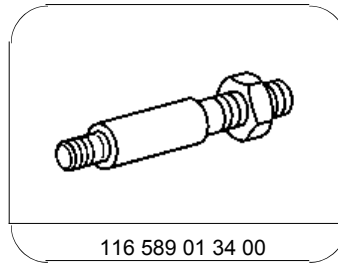


116 589 01 34 00

Threaded stud

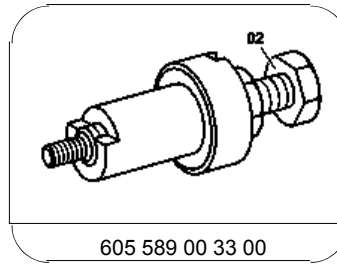

605 589 00 33 00

Puller

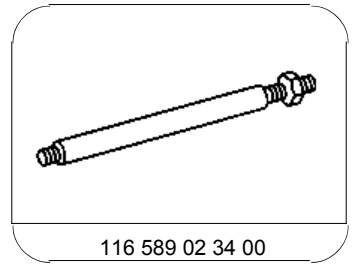


116 589 02 34 00

Threaded stud

A Remove slide rail bolts with extractor and threaded bolts


- 1.1 Screw threaded insert (03) into the slide rail bolts (11) and remove the slide rail bolts (11) using the impact extractor (02).
- Use threaded pins 116 589 01 34 00 for engine 271.9.
- Use threaded pins 116 589 02 34 00 for engine 271.8.

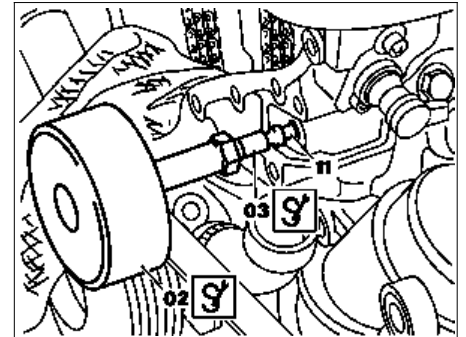

P01.30-0238-01

B Remove sliding rail bolts using extractor

- 1.2 Screw extractor (04) into the sliding rail bolts (11), turn hexagon and extract sliding rail bolts (11).

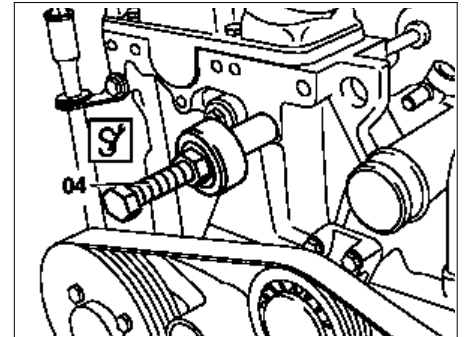

D01.30-0059-01