

240 589 00 61 00

Engine lifting fixture

i Alternatively the engine lifting device (01) or engine carrier arm (1) can be used.
 Engine carrier arm (1) see GOTIS
<http://gotis.aftersales.mercedes-benz.com>


Put on engine carrier arm

- 1 Mount engine carrier arm (1) with its supports on the inner folds of the right and left fender (arrows).
i In the process ensure that the paint on the two fenders is not damaged.
- 2 Lift engine by the front lifting eye.



Engine carrier arm, shown on model 203 with engine 111

P33.10-2071-01

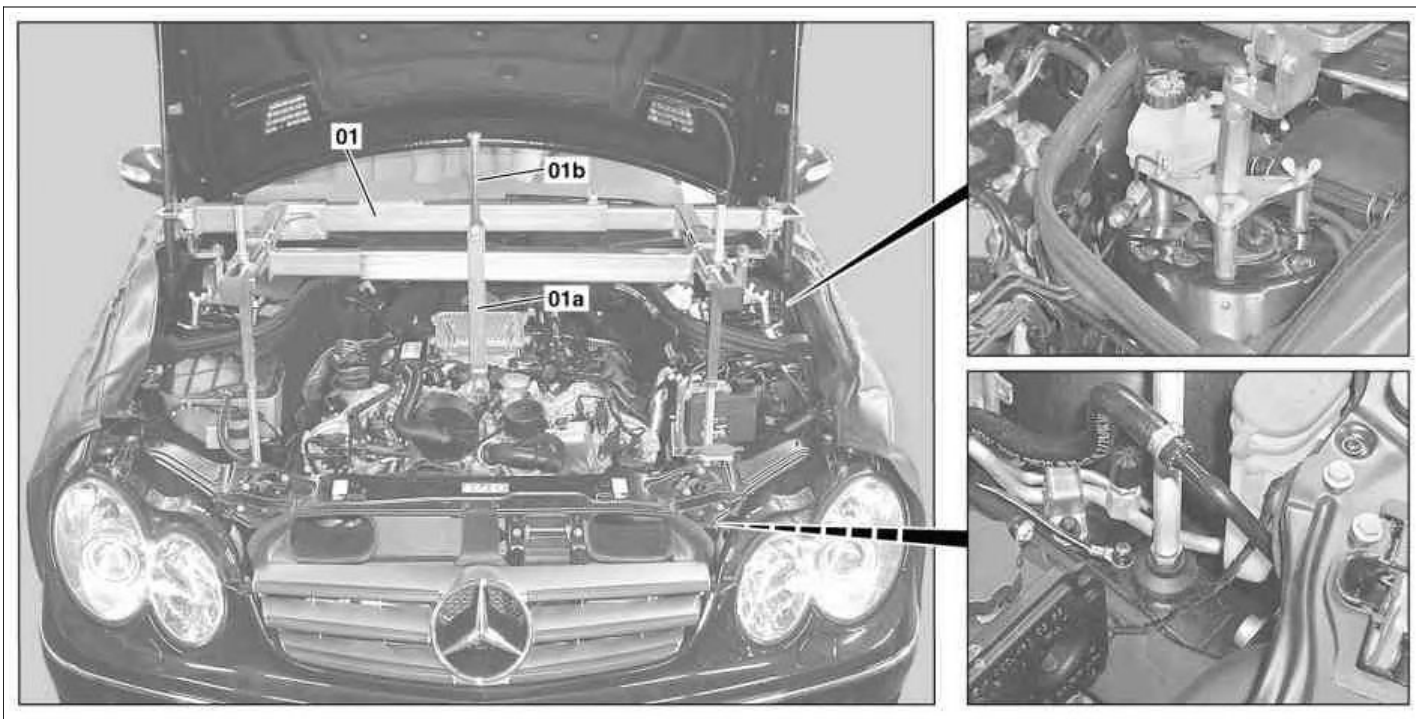

P33.10-2239-09

Engine lifting device, shown on model 209 with engine 272

01 Engine lifting fixture
 01a Lifting device

01b Clamping bolt

01a Lifting device

1 Hose

M33 Electric air pump



P33.10-2238-01

Mount engine lifting device

ⓘ Observe the manufacturer's assembly specifications and safety information on the engine hoist (01), in order to avoid assembly faults.

1 Mount preassembled engine hoist (01) on the strut towers and longitudinal member.

ⓘ When mounting ensure that no lines or hoses are pinched and no paint is damaged in the area of the area of the longitudinal member and suspension strut tower.

2 Adjust the engine hoist (01) and tighten the bolted connections.

3 Detach the hose (1) from the electrical air pump (M33).

ⓘ Only on vehicles with engine 271, 272, 273.

4 Mount lifting device (01a) on the front engine lifting eye.

5 Tighten clamping bolt (01b) and raise engine.