


MODEL 203, 209

- 1 Snap lock
- 2 Air filter housing

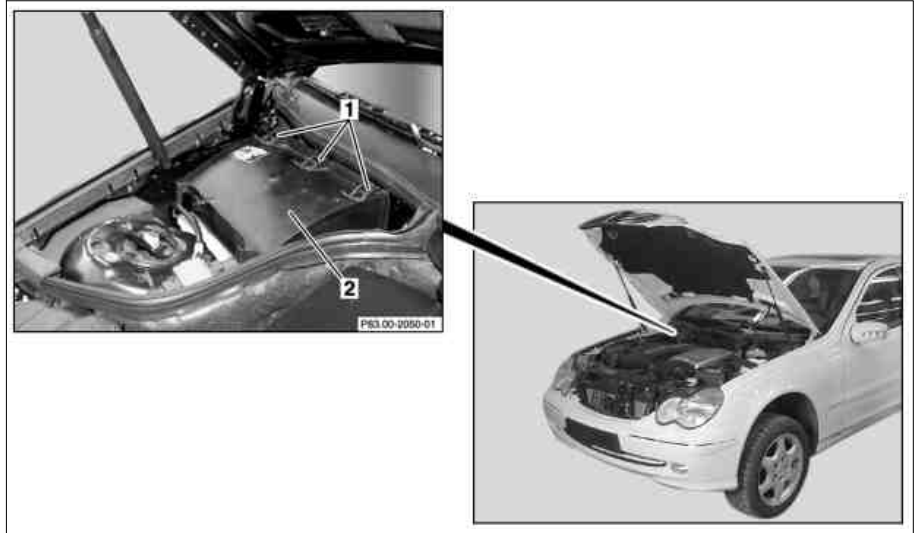

P83.00-2051-05

Modification notes

10.11.00	Slacken screw, removed	Step 2	
10.11.00	Turn bracket, removed	Step 3	
10.11.00	Picture revised	Entry picture	

	<b>Remove/install and replace</b>		
<b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
<b>Danger!</b>	<b>Risk of explosion</b> caused by escaping oxyhydrogen gas. <b>Risk of injury</b> caused by caustic burns to eyes, skin and mucous membranes from battery electrolyte (contains diluted sulfuric acid) or metal spatter due to short circuit. <b>Risk of burn injuries</b> caused by short circuit. <b>Risk of poisoning</b> caused by swallowing battery electrolyte (contains diluted sulfuric acid) or absorption of lead over the skin or orifices	No fire, sparks, open flames or smoking. Wear acid-resistant gloves and clothing and safety glasses with side guards. Do not place any conductive objects on the battery and avoid any short circuit from battery positive to ground. Only fill liquid battery electrolyte (diluted sulfuric acid) into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
	Notes on battery		AH54.10-P-0001-01A
1 <b>AR</b> <b>AR</b>	Open engine hood and raise to vertical position Open engine hood, move to upright position and close	Model 203 Model 209	AR88.40-P-1000P AR88.40-P-1000Q
2	Open snap fastener (1)		
3	Take out air filter housing (2)		
4	Take dust filter out of dust filter housing (2)	<b>Installation:</b> Install new dust filter, do not clean old one.	
5	Install in the reverse order		