

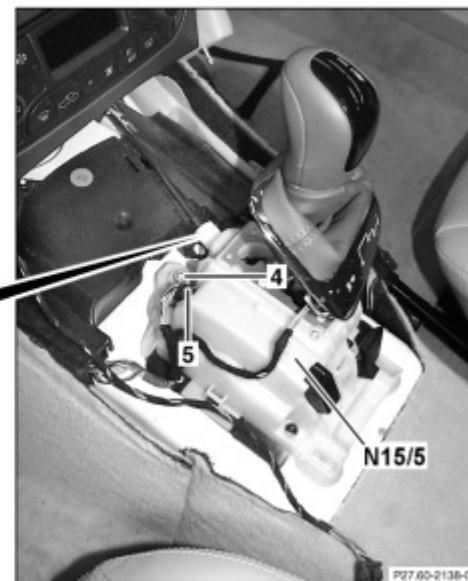
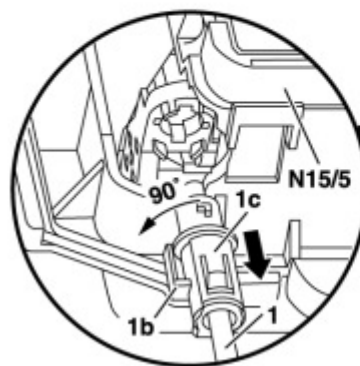
| | | |
|-----------------|---|---------|
| AR27.60-P-0901P | Remove/install electronic selector lever module (ESM) | 21.2.00 |
|-----------------|---|---------|

TRANSMISSIONS 722.6 in MODEL 203
 TRANSMISSIONS 722.9 in MODEL 203.052 /054 /056

Illustrated on model 203

1 Ignition lock control cable
 1b Locating tab
 1c Clutch
 4 Bolt
 5 Electrical connector

N15/5 Electronic selector lever module
 control unit


 





P27.60-2139-05

Modification notes

| | | | |
|---------|---|--|--|
| 18.6.04 | Disconnect/connect ground line on battery | | |
|---------|---|--|--|

| | | | |
|----------------|--|--|------------------------------------|
| | Remove/install | | |
| Danger! | Risk of death caused by vehicle slipping or toppling off of the lifting platform. | Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer. | AS00.00-Z-0010-01A |
| 1 | Raise vehicle with lifting platform | | AR00.60-P-1000P |
| | | | |

| | | | |
|--|--|--|------------------------------------|
| 2 | Unhook shift rod from intermediate lever from below |  Press off retainer using a suitable tool. | |
| | |  Installation: Replace both locking devices of the shift rod, check bushings for damage and replace if necessary. | |
| 3 | Lower vehicle with lifting platform | | |
| 4 | Remove selector lever handle with covering | Model 203 with mechanism 722.6 up to 30.4.02 | AR27.60-P-0905P |
| | | Model 203 with mechanism 722.6 from 1.5.02 Model 203 with transmission 722.9 | AR27.60-P-0905PA |
| 5 | Remove center console | Model 203 | AR68.20-P-2000P |
| 6 | Detach ignition switch control cable (1) at electronic selector lever module control unit (N15/5). |  Compress the retaining lug (1b) and press the coupling (1c) against the spring force into the electronic selector lever module control unit (N15/5), twist 90° (to the right or left) and detach cable of ignition switch (1). | |
| 7 | Unscrew bolt (4) |  | BA27.60-P-1001-02A |
| 8 | Separate electrical connector (5) | | |
| 9 | Remove electronic selector lever module control unit (N15/5) | | |
| 10 | Install in the reverse order | | |
| 11 | Adjusting shift rod | | AR27.60-P-0980P |
| 12 | Connect STAR DIAGNOSIS, read out and erase fault memory | | |
|  AD | Connect STAR DIAGNOSIS and read out fault memory | | AD00.00-P-2000-04A |
| | | STAR DIAGNOSIS diagnosis system | WE58.40-Z-1013-06A |

 **Tightening torques for floor shift**

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

| Number | Designation | | Transmission 722.6 | Transmission 722.9 |
|--------------------|------------------------------|----|-----------------------|-----------------------|
| BA27.60-P-1001-02A | Bolt, floor selector to body | Nm | 6 | 6 |

Workshop equipment/MB testers (see Workshop Equipment Manual)

| | |
|--------------------|---|
| WE58.40-Z-1013-06A | STAR DIAGNOSIS Compact diagnosis system for passenger cars, order number 6511 1801 00 |
|--------------------|---|