AR68.30-P-4300PB Page 1 of 4

AR68.30-P-4300PB	Removing and installing headliner	21.11.00	
------------------	-----------------------------------	----------	--

MODEL 203.7


Illustrated on vehicle with code (413) panorama sliding roof


- 1 A-pillar paneling
- 2 Interior rearview mirror
- 3 Rain sensor cover (with code (345a) rain sensor)
- 4 Sun visor
- 5 Grab handle
- 6 B-pillar paneling
- 8 Headliner

A44/3 Rear dome lamp PTS warning display (with code (220a) Parktronic system (PTS)) E15/3 Rear dome lamp N70 Overhead control panel control unit





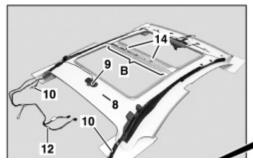

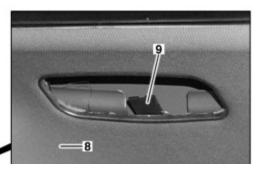

AR68.30-P-4300PB Page 2 of 4

P68.30-2807-09

Illustrated on vehicle with code (413) panorama sliding roof

9 Mounting clip 10 Check strap 11 Front bracket

14 Clip

8 Headliner

12 Wiring harness

N10/2 SAM control module with rear fuse and relay module

Modification notes

24.1.01	Entry pattern changed	P68.30-2315-09	
24.1.01	Special tool, assembly wedge (110 589 03 59 00) eliminated	Step 17	
24.1.01	Loosening rear Velcro strips (10) eliminated	Step 17	
24.1.01	Unhooking catch straps (10) added	Step 20	

XX	Remove/Install		
1	Move left and right front seats toward front	i See Operating Instructions	
2	Disconnect ground cable of battery		AR54.10-P-0003P
3	Unclip left and right door sill molding and remove		
4	Remove edge guard from door cutout on left and right		
5	Remove left and right paneling from A-pillar (1)		AR68.30-P-4050P
6	Remove overhead control panel control module (N70)		AR82.20-P-1000P
7	Remove inside rearview mirror (2).		AR68.40-P-0001P
8	Remove inside rearview mirror holder		
9.1	Remove rain sensor cover (3) and disconnect rain sensor	On vehicles with code (345a) rain sensor	
10	Disconnect light switch-on sensor		
11	Remove left and right sun visor (4),		

AR68.30-P-4300PB Page 3 of 4

	unscrew bolt from left and right pivot bearing.		
12	Remove left and right handle (5)		AR68.30-P-4330P
13	Remove left and right paneling from B-pillar (6)		AR68.30-P-4700PB
14.1	Remove interior protection system transmitter/receiver	Only on vehicles with code (882b) interior protection system (only with ATA) when replacing headliner (8).	AR80.50-P-9820F
15.1	Remove rear dome lamp (E15/3)	On vehicles without code (220a) Parktronic system (PTS)	AR82.20-P-0113P
15.2	Remove rear dome lamp PTS warning display (A44/3)	On vehicles with code (220a) Parktronic system (PTS)	AR54.65-P-0004P
16	Move mounting clips (9) toward front		
17	Fold rear seat backrest forward	i See Operating Instructions	
18	Remove left and right paneling from Remove C-pillar		AR68.30-P-4490PB
19	Disconnect electrical connectors for headliner (8) wiring harness (12) from rear SAM control module with fuse and relay module (N10/2)		
20.1	Expose headliner wiring harness (8) in area of right C-pillar and disconnect electrical connectors	On vehicles with code (273) telephone preequipped for D-network portable cellular telephone or code (329) portable cellular telephone preequipped for AMPS system or code (494) California version or code (498) Japanese version or code (852) portable cellular telephone preequipped completely on dome or code (853) MB standard telephone or code (854) MB portable cellular telephone or code (855) TELE AID or code (810) sound system	
21	Remove edge guard from rear door cutout		

AR68.30-P-4300PB Page 4 of 4

22	Unhook catch straps (10) from headliner (8)		
23.1	Unclip headliner (8) in area B (arrows)	On vehicles with code (413) Panoramic sliding roof i Installation: Ensure that clips (14) arrest audibly	
24.1	Unhook headliner (8) on left and right in area A	On vehicles with code (413) Panoramic sliding roof i For this purpose move headliner (8) slightly on side left and right sides and remove	
25	Remove headliner (8) from front mount (11) and lay down in passenger compartment	Installation: Ensure that headliner (8) is positioned on front mount (11)	
26	Mask in area of rear door cutout with adhesive tape	This allows the headliner (8) to slide through the rear door cutout more easily	
27	Remove headliner (8) through rear door	Remove headliner (8) with aid of helper and lay down on suitable subbase.	
28.1	Prepare headliner (8) for installation.	Only when replacing headliner (8).	AR68.30-P-4305P
29	Install in the reverse order		