


ENGINE 112

- 04 Dipstick
- 4 Plug
- 5 Oil measuring pipe

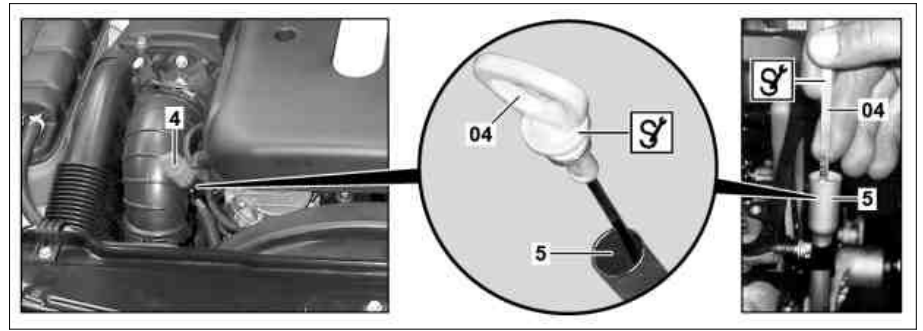


P18.40-2442-04

<p>⚠ Danger !</p>	<p>Risk of accident from vehicle starting off by itself when engine running. Risk of injury (bruises and burns) resulting from working on the engine while it is being started or when it is running.</p>	<p>Secure vehicle to prevent it from starting off by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.</p>	<p>AS00.00-Z-0005-01A</p>	
<p>⚠ Danger !</p>	<p>Risk of injury to skin and eyes due to handling of engine oil. Risk of poisoning caused by swallowing engine oil</p>	<p>Wear protective gloves, protective clothing and safety glasses. Do not fill engine oil into beverage containers.</p>	<p>AS18.00-Z-0001-01A</p>	
<p>1</p>	<p>Allow engine to warm up</p>	<p>i Coolant temperature min. 80 °C.</p>		
<p>2</p>	<p>Turn off engine</p>			
<p>3</p>	<p>Pull stop plug (4) out of oil measuring pipe (5)</p>	<p>i The stop plug (4) and oil measuring pipe (5) can be at the front or rear of the engine (depending on the model series).</p>		
<p>◀</p>	<p>Check</p>			
<p>4</p>	<p>Guide dipstick (04) into oil measuring pipe (5)</p>	<p>i The tip of ☞ dipstick (04) must be in the oil pan. The collar of the handle sits close to oil measuring pipe (5). ☞ Measuring rod</p>	<p>*120589072100</p>	
<p>5</p>	<p>Read off engine oil level at dipstick (04)</p>	<p>☞ Measuring rod</p>	<p>*120589072100</p>	
<p>6</p>	<p>Determine level using oil level table</p>	<p>☞ ENGINE 112.912/946 in MODEL 203 ENGINE 112.912/955 in MODEL 209 ENGINE 112.913/949 in MODEL 211 ENGINE 112.973 in MODEL 230 ☞ ENGINE 112.916/953 in MODEL 203 with CODE M005 (4MATIC) ☞ ENGINE 112.917/954 in MODEL 211 ENGINE 112.975 in MODEL 220 ☞ ENGINE 112.961 in MODEL 203</p>	<p>*BF18.00-P-1001-03B *BF18.00-P-1001-03K *BF18.00-P-1001-03BM *BF18.00-P-1001-03BA</p>	
<td colspan="2" data-bbox="344 1507 794 1561"> <p>If the engine oil level is too high or too low, correct it</p> </td> <td data-bbox="794 1507 1241 1561"></td> <td data-bbox="1241 1507 1493 1561"></td>	<p>If the engine oil level is too high or too low, correct it</p>			
<p>7</p>	<p>Correct the engine oil level</p>	<p>Maintenance intervals in combination with oils as per MBBV sheet, general overview not for USA Maintenance intervals in combination with oils as per MBBV sheet, general overviewFor USA only i Check engine oil level again after correcting it. To do so repeat steps 4 through 6. If engine oil level is too high, ↓ Suction off engine oil quantity according to the oil level table. If engine oil level is too low, ↓ Fill engine oil quantity according to the oil level table.</p>	<p>AP18.00-P-1849UB AP18.00-P-1849UBU</p>	
<p>8</p>	<p>Insert stop plug (4) into oil measuring pipe (5)</p>			

 Oil level check

Number	Designation	Engine 112.912/913/946/94 9/955/973		
BF18.00-P-1001-03B	Oil level	Maximum	mm	171
		minimum	mm	151

 Oil level check


Number	Designation	Engine 112.961 in model 203		
BF18.00-P-1001-03BA	Oil level	Maximum	mm	172
		Minimum	mm	152

 Oil level check

Number	Designation	ENGINE 112.917/954 in MODEL 211 with 4- MATIC		ENGINE 112.975 in MODEL 220 with 4- MATIC
BF18.00-P-1001-03BM	Oil level	Maximum	mm	125
		Minimum	mm	96

 Oil level check

Number	Designation	ENGINE 112.916/953 in MODEL 203 with 4MATIC		
BF18.00-P-1001-03K	Oil level	Maximum	mm	124
		minimum	mm	104

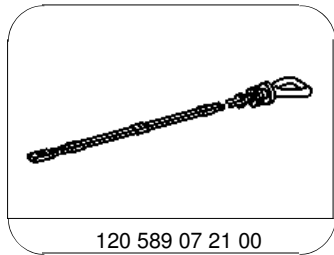

120 589 07 21 00

Measuring rod