SM33.30-P-0003A	Check front axle transmission oil level	9.1.08
MODEL 204		

## Operation no. of operation texts or standard texts and flat rates

Category	Op. no.	Operation text
Р	025893	Check oil level in front axle transmission
Р	025894	Correct oil level in front axle transmission (after check)
Р	025895	Replace front axle transmission (after check)

4	Checking		
1	Check whether vehicle is affected	Model 204 from WDD2040811F004139 to WDD2040871F046717	SM33.30-P-0003-01AA
2	Drain oil	i Collect oil!	
3	Measure quantity of oil collected	i If there is 0.4 I or more oil present, continue with operation step 4. If there is 0.39 I or less present, continue with operation step 7.	
XX	Remove/install		
4	Remove right propeller shaft		AR33.30-P-0620CWX
5	Replace oil in front axle transmission	<u></u>	*BF33.30-P-1001-03F
<b>⊯</b> BB	Universal hypoid gear oils (SAE 85 W-90)	Sheet 235.7	BB00.40-P-0235-07A
6	Install right propeller shaft	i End measure.	AR33.30-P-0620CWX
7	Replace front axle transmission		AR33.30-P-0525CWX