


ENGINE 156, 271, 272, 274, 276 in MODEL 204.0/2  
 ENGINE 156, 271, 276 in MODEL 204.3  
 ENGINE 272, 276 in MODEL 204.9  
 ENGINE 274 in MODEL 204

Shown on model 204.041

1 Fuel line  
 2 Fuel filter  
 3 Float linkage  
 B4/1 Left fuel level indicator sensor  
 B4/7 Fuel pressure sensor (except engine 156)  
 M3 Fuel pump (FP)

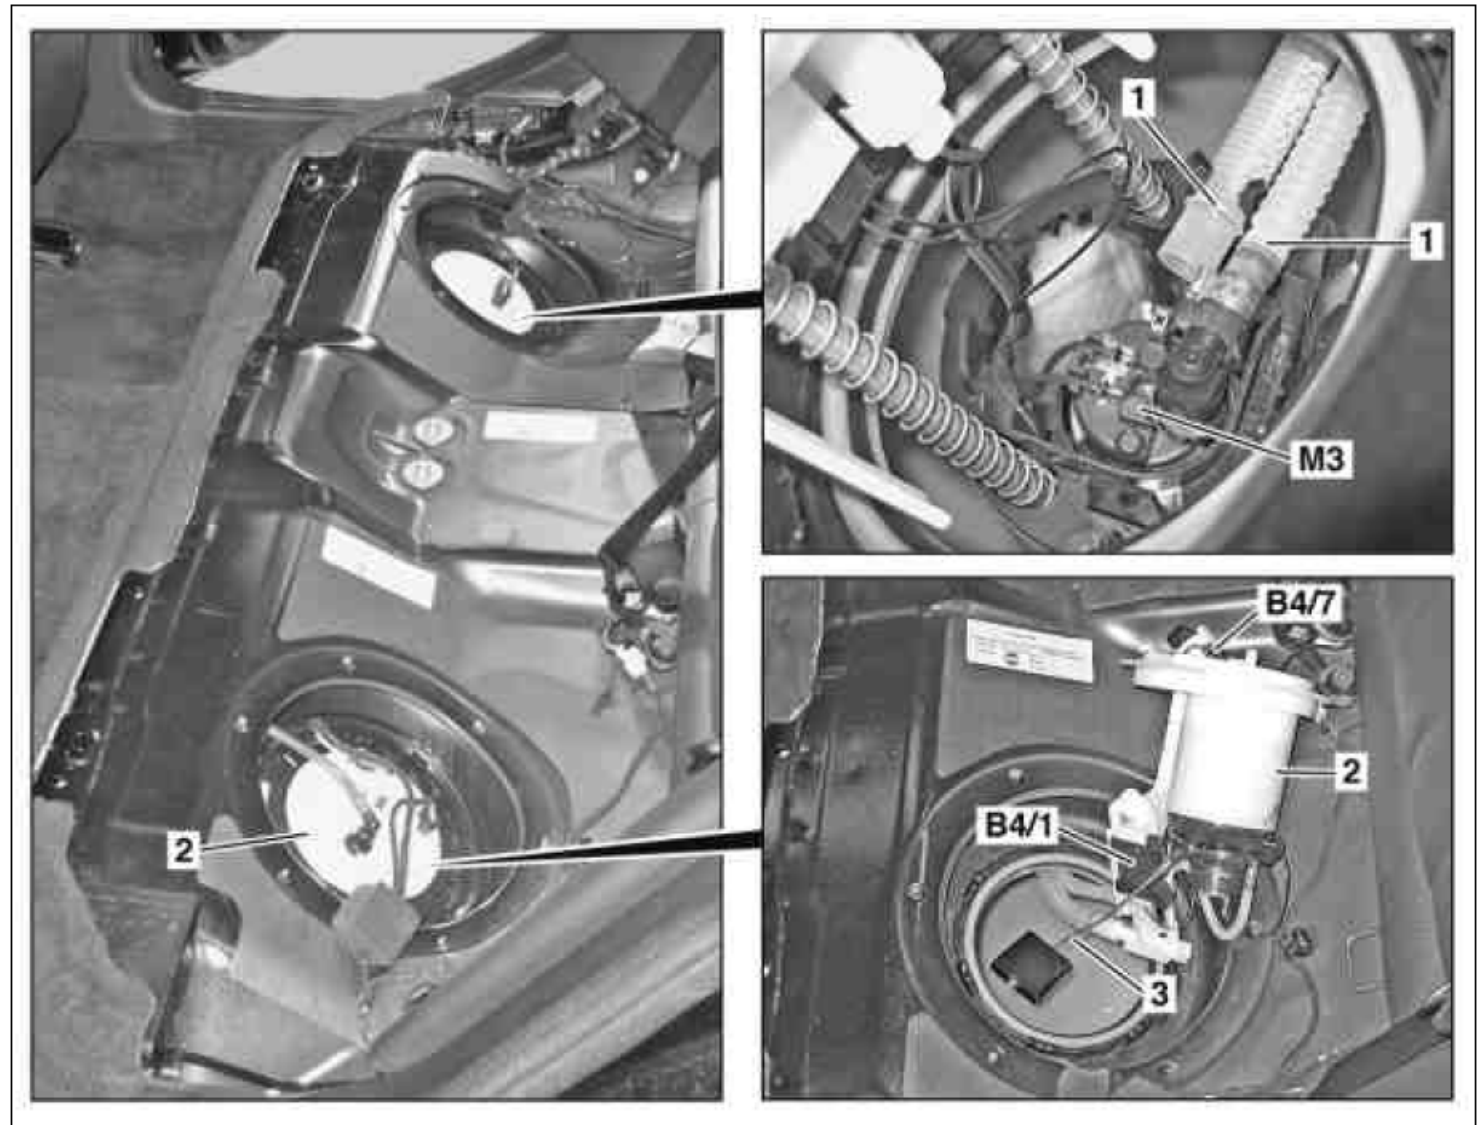

P47.20-2322-06

|                 |  |   |   |
|-----------------|--|---|---|
|                 | <b>Remove/install</b>  |   |   |
| <b>Danger !</b> | <b>Risk of explosion</b> caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel. | No fires, sparks, open flames or smoking. Pour fuels into suitable and appropriately marked containers only. Wear protective clothing when handling fuel.   | AS47.00-Z-0001-01A  |
|                 | Information on preventing damage to electronic components due to electrostatic discharge   |   | AH54.00-P-0001-01A  |
| 1<br>AR         | Detach fuel lines (1) from fuel pump (M3) and swirl pot<br>Remove/install fuel pump  | MODEL 204   | AR47.20-P-5710CW  |
| 2<br>AR         | Remove cap of the left service opening<br>Open, close latch  | <b>Installation:</b> Carry out leak test before installing the cap.<br>Screw/bolt, cover to vehicle floor   | AR47.10-P-4100-02CW<br>BA47.10-P-1005-01M                   |
| 3<br>AR         | Remove left locking ring<br>Open, close latch  | Antifriction paste, rubber parts 2.5 kg, DB supply specification 6867.00<br>Claw-type wrench  | AR47.10-P-4100-02CWA<br>BR00.45-Z-1002-06A<br>*001589000700 |
| 4               | Remove fuel filter (2) with left fuel level indicator sensor (B4/1) and fuel lines (1) from left chamber of fuel tank  | Handle the left fuel level indicator sensor (B4/1) with care. The float linkage (3) can otherwise be deformed.<br>Collect dripping fuel with absorbent rag.<br>Do not kink, crush or twist the fuel lines (1) and do not lay them in tight radii. |   |
| 5<br>AR         | Detach left fuel level indicator sensor (B4/1) from fuel filter (2)<br>Remove/install fuel level sensor  |   | AR47.10-P-7000CW  |
| 6<br>AR         | Detach fuel pressure sensor (B4/7) from fuel filter (2)<br>Remove/install fuel pressure sensor   | ENGINE 271.9, 272   | AR07.04-P-0030CW  |
| 7               | Install in the reverse order   |   |   |