


MODEL 204.0

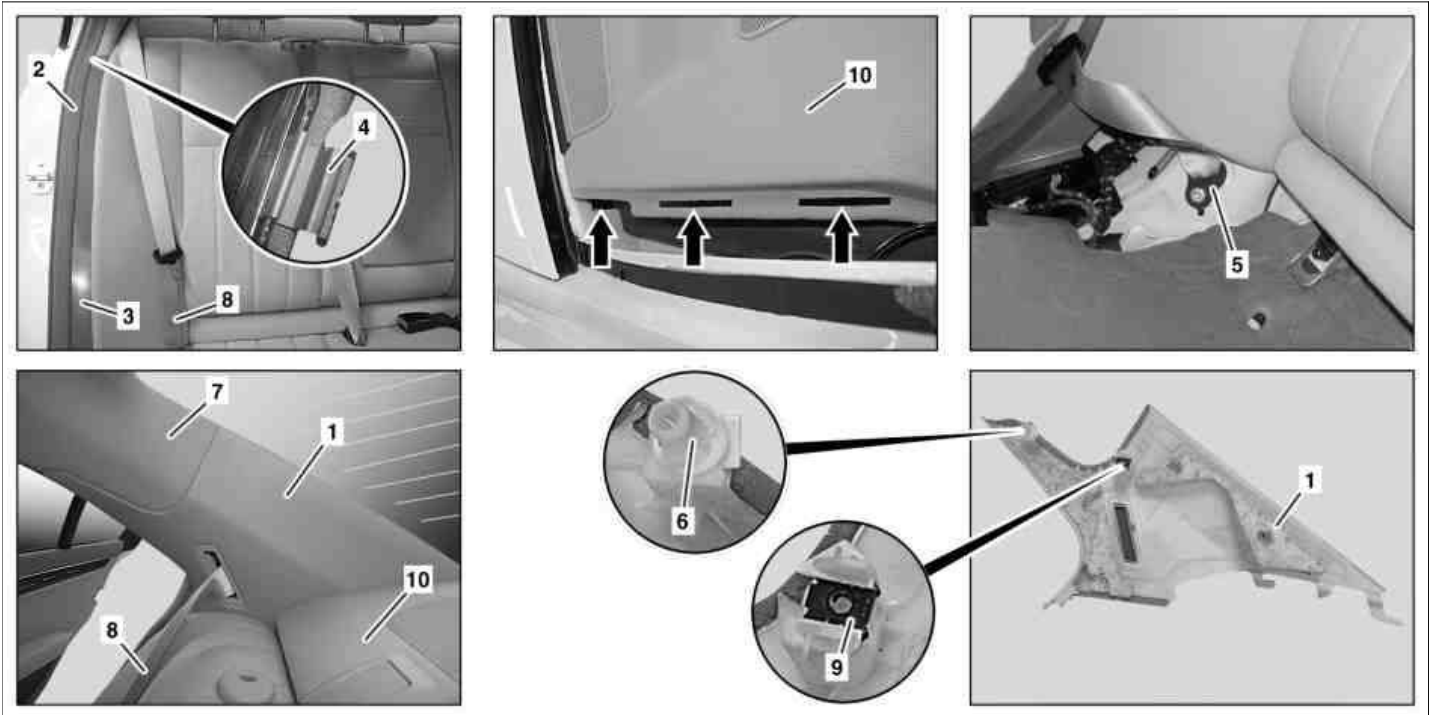

P68.30-3305-09

- 1 C-pillar paneling
- 2 Edge guard
- 3 Trim
- 4 Clamp


- 5 Belt end fitting
- 6 Clip
- 7 Headliner

- 8 Seat belt
- 9 Sheet metal nut
- 10 Rear shelf

	Removing		
1	Remove edge guard (2) in area of C-pillar paneling (1) and upper area of paneling (3).		
2	Unclip clamp (4).		*110589035900
3	Remove rear seat cushion		AR91.12-P-1020CW
4	Remove belt end fitting (5)		
5	Unclip C-pillar paneling (1) from clip (6) and pull toward front; slightly pivot in direction of center of vehicle and remove toward front from C-pillar.	Carefully remove C-pillar paneling (1). Danger of damaging headliner (7). Clip (6) remains on C-pillar paneling (1). 	*110589035900
6	Pull seat belt (8) through passage out of C-pillar paneling (1).		
	Install		
7	Install sheet metal nut (9), which stuck in C-pillar mount during removal, in C-pillar paneling (1).		
8	Pull seat belt (8) through passage in C-pillar paneling (1)	Do not twist seat belt (8).	
9	Position C-pillar paneling (1) in openings (arrows) in rear shelf (10) and body.	Thereby hold C-pillar paneling (1) pivoted slightly in direction of center of vehicle.	
10	Clip C-pillar paneling (1) to C-pillar.	Observe transition to headliner (7).	
11	Install belt end fitting (5)	Do not install seat belt (8) when twisted 	*BA91.40-P-1006-01P
12	Install rear seat cushion		AR91.12-P-1020CW
13	Clip in clamp (4).		
14	Fasten edge guard (2).		

Nm Seat belts/emergency tensioning retractors

Number	Designation	Type
BA91.40-P-1006-01P	Bolt at rear belt end fitting	Nm 32

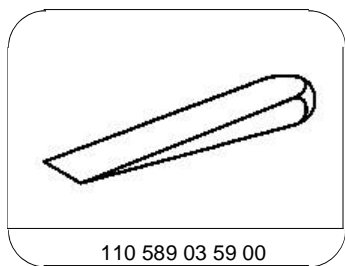

Mounting wedge