


Nm Torque converter

Number	Designation			Trans- mission 722.6 except 722.648	Trans- mission 722.648	Trans- mission 722.9
BA27.20-P-1001-01C	Drain plug to torque converter	M8	Nm	10	10	10
		M10	Nm	15	15	15

- 1 Remove cover (1) from bell housing.
- 2 Crank engine in the direction of engine rotation until the drain screw (2a) on the torque converter (2) is accessible.

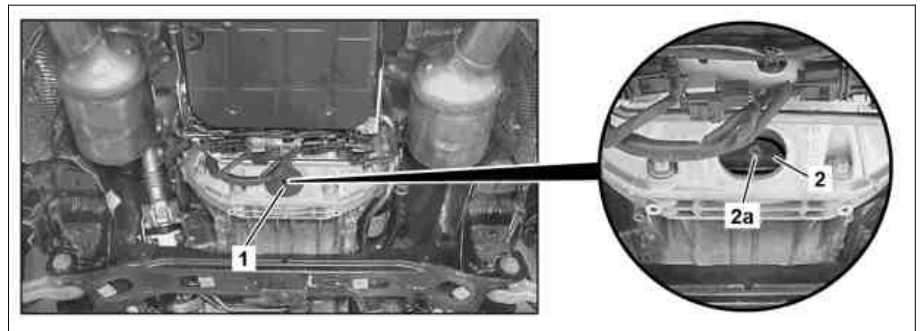

P27.20-2099-04

- 3 Remove drain screw (2a) from torque converter (2) and drain automatic transmission fluid.
i Transmission 722.6: Allow automatic transmission fluid to drain into a used oil collector unit.
 Used oil collector unit - mobile
[gotis://S 18.1 05.0](#)
i Transmission 722.9: Drain automatic transmission fluid into a drain pan and note quantity drained.
 Drain pan
[gotis://S 18.1 08.0](#)
- 4 Replace sealing ring of drain screw (2a) and screw drain screw (2a) into torque converter (2) **Nm**
- 5 Insert cover (1) into bell housing.