


MODEL 204, 207, 212, 218

Shown on model 204

- 1 Slide
- 1a Clip
- 2 Activated charcoal dust filter
- 3 AC housing
- A32m1 Blower motor

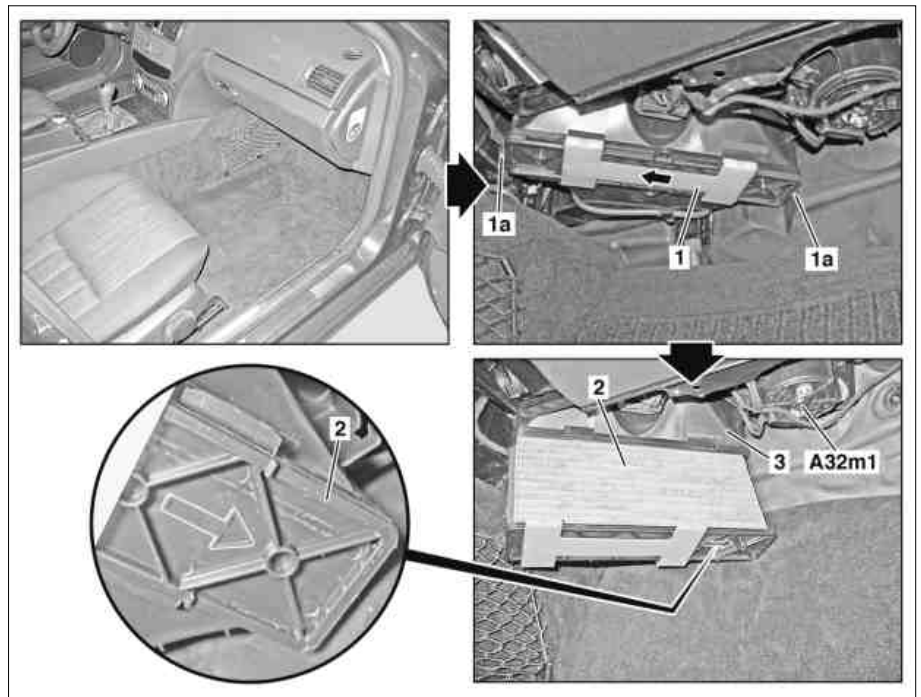

P83.00-2268-06

	Remove		
1 	Remove cover below right dashboard		AR68.10-P-1520CW
2	Lever up and remove clips (1a)		
3	Unlock slide (1) in the direction of the arrow and remove activated charcoal dust filter (2) downwards from air conditioner housing (3)		
	Clean		
4	Clean area surrounding air conditioner housing (3)		
	Disassemble		
5	Remove slide (1) from old activated charcoal dust filter (2)		
	Assemble		
6	Mount slide (1) at new activated charcoal dust filter (2)		
	Install		
7	Slide new activated charcoal dust filter (2) into air conditioner housing (A32)	The arrow marked on the activated charcoal dust filter (2) must point toward the blower motor (A32m1).	
8	Lock activated charcoal dust filter (2) with slide (1) against the direction of the arrow	The recess on the air conditioner housing cover must point toward the center console. Make sure that the seal is seated correctly.	
9	Press clamps (1a) together		
10 	Install cover below dashboard on right		AR68.10-P-1520CW