

Document 190% Continuous document Validity off Page 1 of 2

Document Picture Operation steps Basic data Tightening torques

AR05.20-P-7295CVL	Remove/install solenoid camshaft	25.3.09
-------------------	----------------------------------	---------

ENGINE 272 in MODEL 204  
LH cylinder head  
ENGINE 272, 273 in MODEL 207  
Left cylinder head

1 Bolts  
2 Bolts  
3 Power steering expansion reservoir

B6/4 Left intake camshaft Hall sensor  
B6/6 Left exhaust camshaft Hall sensor  
Y49/4 Left intake camshaft solenoid  
Y49/6 Left exhaust camshaft solenoid

The diagram shows a top-down view of the left cylinder head. A circular inset provides a magnified view of the camshaft area. In the main view, callout 1 points to bolts on the left side, callout 2 to bolts on the right side, and callout 3 to the power steering expansion reservoir. The inset shows callout B6/4 for the left intake camshaft Hall sensor, callout B6/6 for the left exhaust camshaft Hall sensor, callout Y49/4 for the left intake camshaft solenoid, and callout Y49/6 for the left exhaust camshaft solenoid.