

ENGINE 272, 156 in MODEL 204 with CODE (494) USA version

ENGINE 272, 273 in MODEL 207 with CODE (494) USA version


1 Fuel tank

2a Locking clamp

2b Security catch

3 Seal

B4/3 Fuel tank pressure sensor

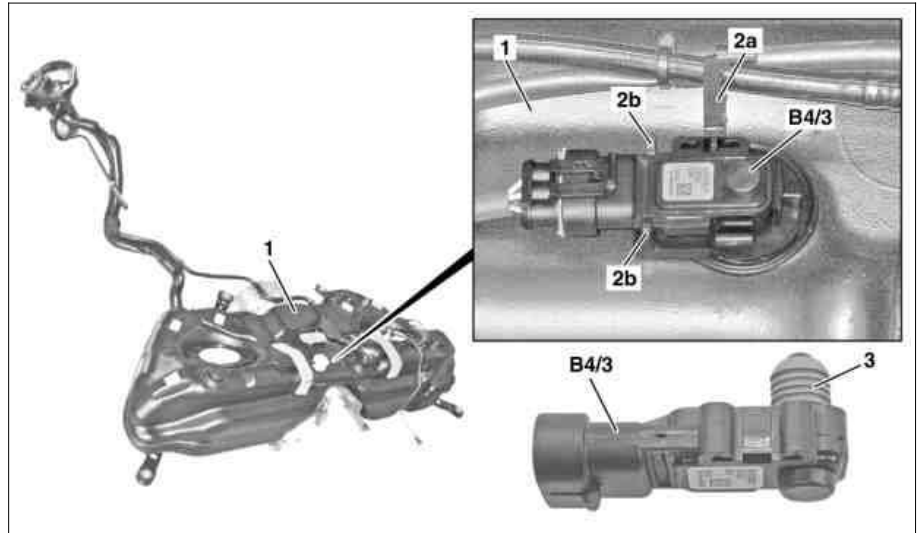

P47.50-2056-05

☒ ☒	Remove/install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove fuel tank (1)		AR47.10-P-4100CW
2	Release and disconnect electrical connector for pressure sensor (B4/3)		
3	Unlock and fold up locking clamp (2a)		
4	Press lock tabs (2b) to the side and pull pressure sensor (B4/3) out of fuel tank (1)	⚠ Do not turn pressure sensor (B4/3) or tilt in order not to damage the lock tab (2b). ☑ Check seal (3) on re-usability; replace pressure sensor (B4/3) if necessary.	
5	Install in the reverse order		
6	Read out fault memory with STAR DIAGNOSIS and erase if necessary		