

MODEL 204.0 except CODE (287) Through-loading feature


MODEL 212.0 /1

except CODE (224) Rear individual seat design

except CODE (282) Ski bag (through-loading feature)

except CODE (287) Through-loading feature

MODEL 218.3 except CODE (287) Through-loading feature

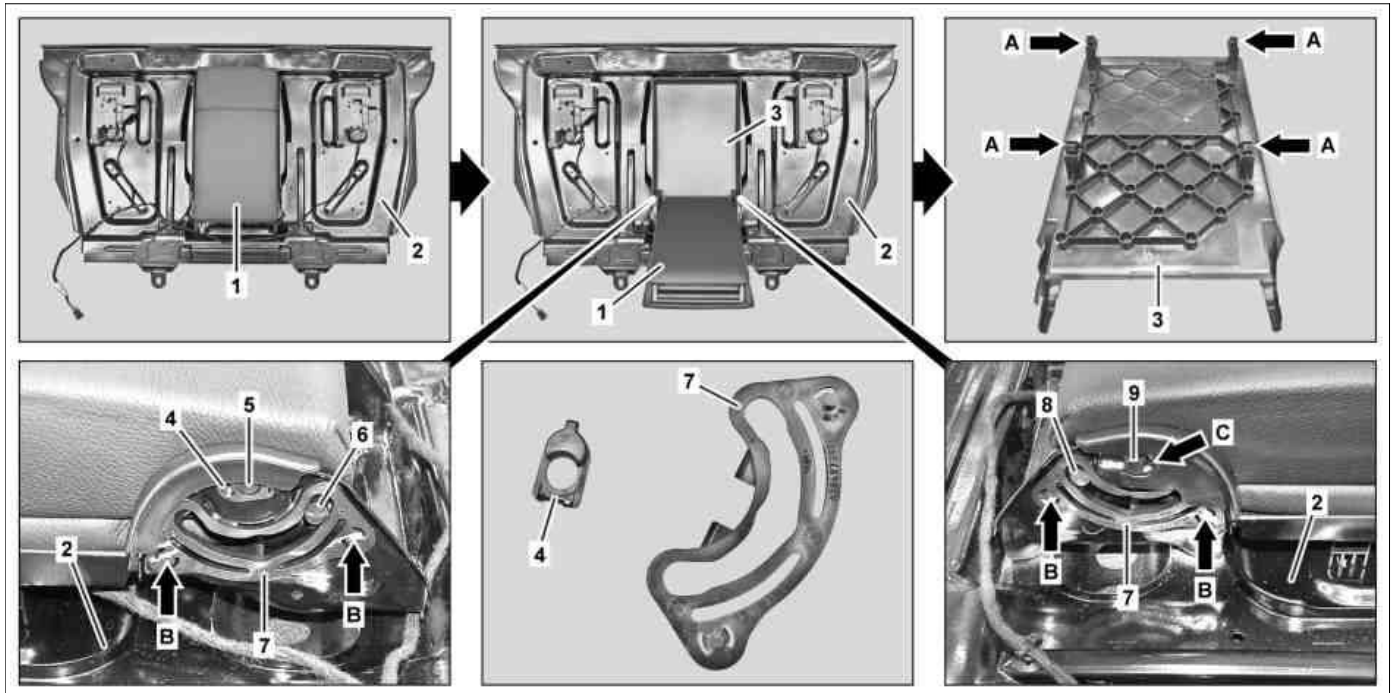

P91.12-3471-09

Shown on model 212.0

1 Armrest

2 Backrest frame

3 Dust shield

4 Fuse

5 Bearing bolt

6 Guide bolts

7 Shift gate

8 Guide bolts

9 Bearing bolt

☒ ☒	Remove/install		
1	Remove cover with padding at rear seat backrest	i Cover remains on padding. Model 204, 212 Model 218	AR91.18-P-1870CW AR91.18-P-1870EL
2	Fold out armrest (1)		
3	Unclip dust shield (3) with catch hooks (arrows A) from backrest frame (2), lift this and remove from supports of backrest frame (2) for armrest (1)	i Installation: Ensure that retaining bracket (arrow C) of dust shield (3) is seated correctly in bearing pin (9).	
4	Unclip retainer (4) from bearing pin (5) and from support of backrest frame (2)	⚠ Risk of breakage of retainer (4). i Installation: Ensure that retainer (4) is seated correctly in bearing pin (5) and in support of backrest frame (2).	
5	Press expanding pins (arrows B) from left and right gate (7)		
6	Remove left and right gate (7)	i Installation: Ensure that left gate and right gate (7) are seated correctly in corresponding support of backrest frame (2).	
7	Remove armrest (1) from supports of backrest frame (2)		
8	Install in the reverse order		