


MODEL 204.0 except CODE (287) Through-loading feature

MODEL 212.0 /1

except CODE (224) Rear individual seat design  
except CODE (287) Through-loading feature

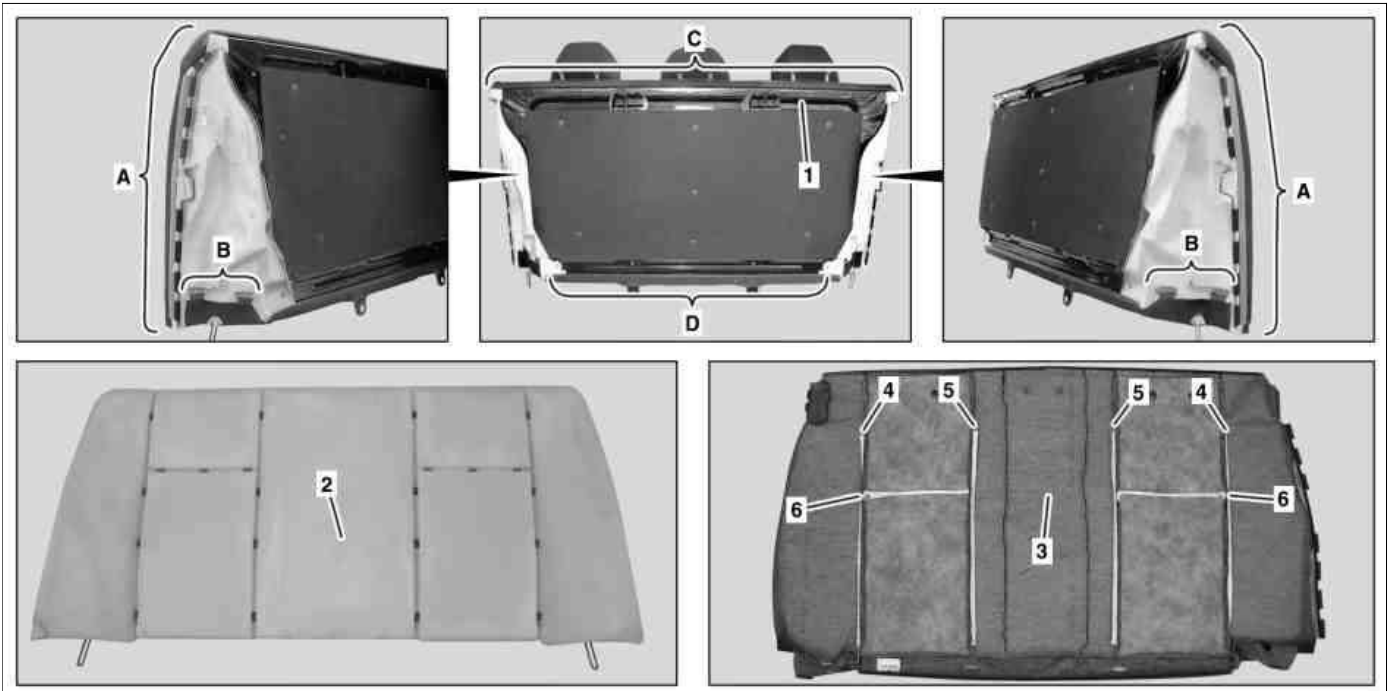

P91.18-2243-09

**Shown on model 204.0**


- 1 Backrest frame
- 2 Padding

- 3 Cover
- 4 Staple wire



- 5 Staple wire
- 6 Staple wire

**Illustrated on model 212.0**

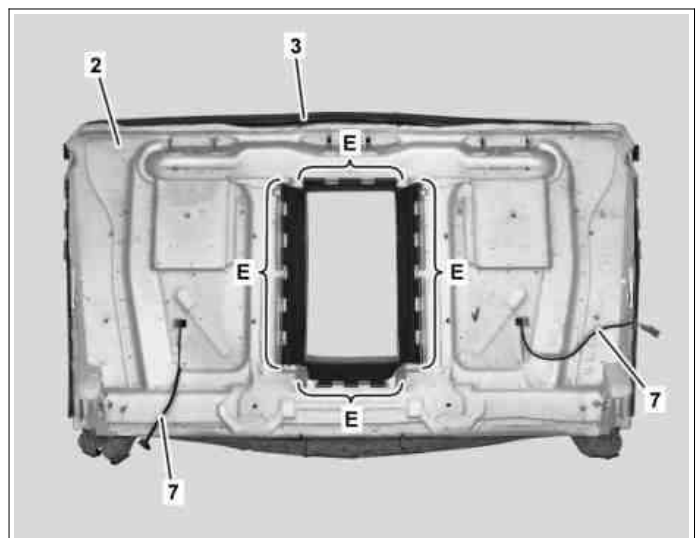- 2 Padding
- 3 Cover
- 7 Seat heater electrical wiring harness (model 212.0/1 with code (872) Electric seat heater for left and right rear seats)



P91.18-2261-11

 	Remove/install		
1	Remove all head restraint guides from rear seat backrest		AR91.16-P-1775CW
2	Remove rear seat backrest		AR91.12-P-1620CW
3	Unhook cover (3) from wire loops in padding (2) in areas A and B		
4	Unhook cover (3) from backrest frame (1) in areas C and D		
5	Slip cover (3) over padding (2)		
6	Unclip staple wires (4) from padding (2)		
7	Pull staple wires (4) out of cover (3)	Model 204	
8	Unclip staple wires (6) from padding (2)		
9	Unclip staple wires (5) from padding (2)		
10	Turn over cover (3) with padding (2)	Model 212	

11	Unhook cover (3) from wire loops in padding (2) in areas E	Model 212	
12	Lift cover (3) and guide electrical wiring harness for seat heater (7) through padding (2)	Model 212 with code (872) Electric seat heaters for left and right rear seats	
13	Remove cover (3) from padding (2)		
14	Pull staple wires (5, 6) out of cover (3)	Model 204, when replacing the cover (3).	
15	Install in the reverse order		