

## ENGINES 271 in MODEL 172, 204, 207, 212

#### Shown on engine 271.9

- Positioning pin
- Holding device Camshaft adjuster 2 3

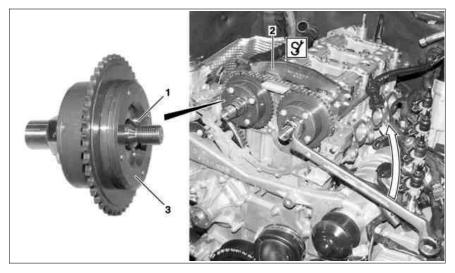

P05.20-2126-05

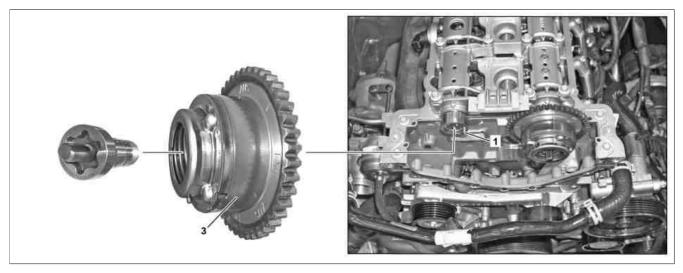

P05.20-2336-08

# Shown on engine 271.8

### Positioning pin


### Camshaft adjuster


XX	Remove/install		
1	Remove cylinder head cover		AR01.20-P-5014CW
2	Remove front cover from cylinder head		AR01.30-P-5700CW
3	Crank engine at center bolt for the crankshaft in direction of rotation until piston of cylinder 1 is positioned at ignition TDC	i The TDC marking on belt pulley/ vibration damper must be aligned with positioning edge on timing case cover.  Cams for the intake and exhaust camshaft at cylinder 1 must be positioned upright at an angle.  i Installation: Inspect basic position of camshafts.	AR05.20-P-6010CW *001589650900
4	Mount retainer (2)	i Mount retainer (2) over cutouts in the camshaft housing-top section.	*271589006100
5.1	Release timing chain	Engine 271.9	AR05.10-P-7605-01TK *271589003100
5.2	Remove chain tensioner	Engine 271.8	AR05.10-P-7800EVO


		i Installation: Install new chain tensioner.	
6	Remove center bolt and remove camshaft	i At the same time unhinge timing chain and	
	adjuster (3)	secure against falling down. The direction of loosening for center bolt on intake or exhaust	
		camshaft is the same (see arrow).	
7		i Installation: Camshaft adjusters (3) do not	
		require any particular adjustment as they feature a positioning pin (1). To avoid	
		confusion, the camshaft adjusters (3) are	
		marked with "A" for exhaust camshaft and with	
		"E" for intake camshaft.	
		<b>S</b> Engine 271.8	*271589001000
		Nm	*BA05.20-P-1002-02A
8	Install in the reverse order		


# Nm Camshaft, camshaft adjustment

Number	Designation	Engine 271.8	Engine 271.9		
BA05.20-P-1002-02A	Center bolt, camshaft adjuster to camshaft	Stage 1	Nm	130	90
		Stage 2	Δ°	-	-

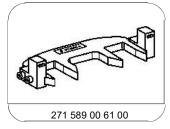

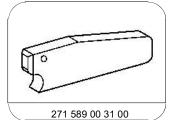

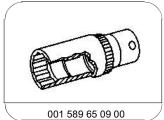

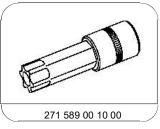

Holding device Wedge Wrench socket Wrench socket