


Model 205  
 Model 213  
 Model 238  
 Model 253

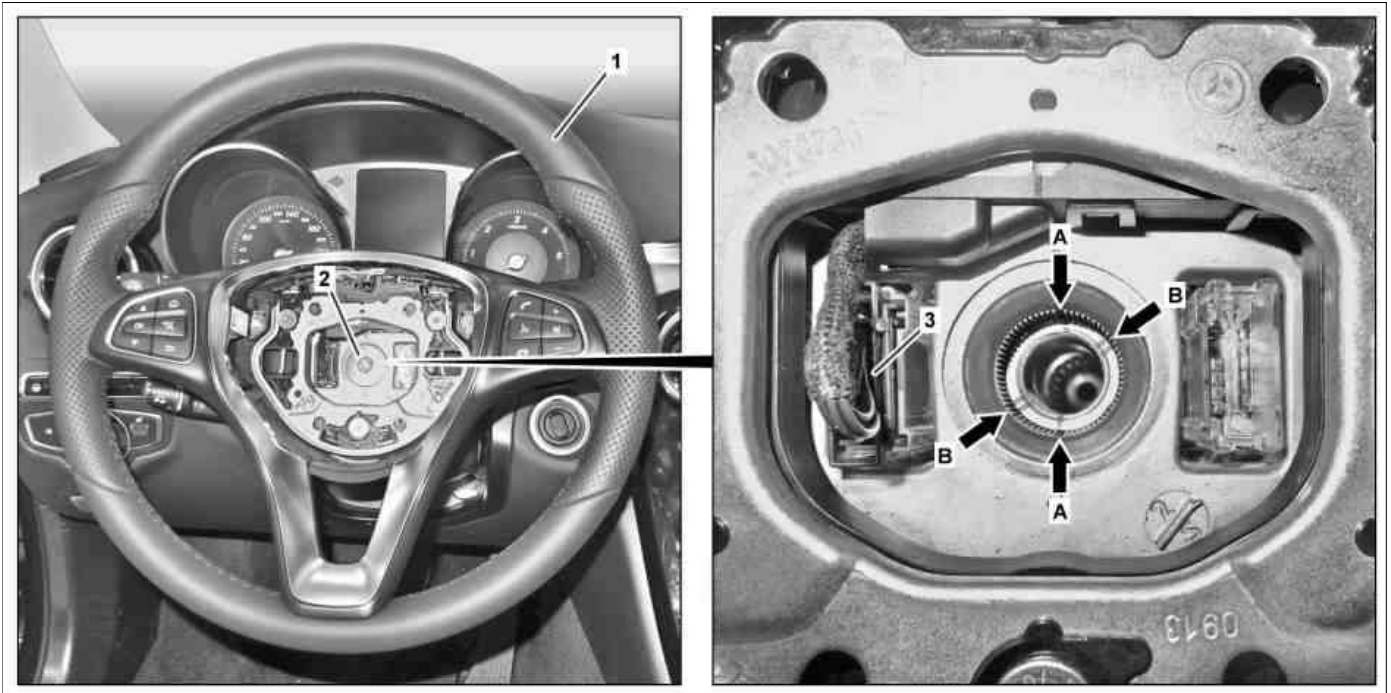

P46.10-3367-09

## Shown on model 205

 
1 Steering wheel  
 2 Screw

3 Electrical connector

	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	<b>Remove/install</b>		
1	Turn steering wheel (1) into center position	The front wheels must be in the straight-ahead position.	
2	Remove airbag unit from steering wheel (1)		AR91.60-P-0660LW
3	Counterhold steering wheel (1) and remove screw (2)	<b>Installation:</b> The screw (2) must be replaced. Screw/bolt, steering wheel to steering shaft	*BA46.10-P-1001-02J
4	Release and disconnect electrical connection (3)		
5	Remove steering wheel (1)	<b>Installation:</b> Align recesses of the splines (arrows A) in steering wheel (1) with markings on the steering shaft. Model 205.### 2# Model 213.### 2# Model 238.### 2# Model 253.### 2# <b>Installation:</b> If there are double line markings (arrows B) on the steering shaft, the recesses of the splines (arrows A) must be lined up with double line markings (arrows B).	
6	Install in the reverse order		

Steering wheel

Number	Designation		Model 205	Model 213
BA46.10-P-1001-02J	Screw/bolt, steering wheel to steering shaft	Nm	80	80

 Steering wheel

Number	Designation		Model 238	Model 253
BA46.10-P-1001-02J	Screw/bolt, steering wheel to steering shaft	Nm	80	80