



 
 

Engine 274.9 in model 205

Engine 274.9 in model 253

- 1 Air filter housing
- 2 Engine air intake duct
- 3 Clamp
- 4 Air intake pipe

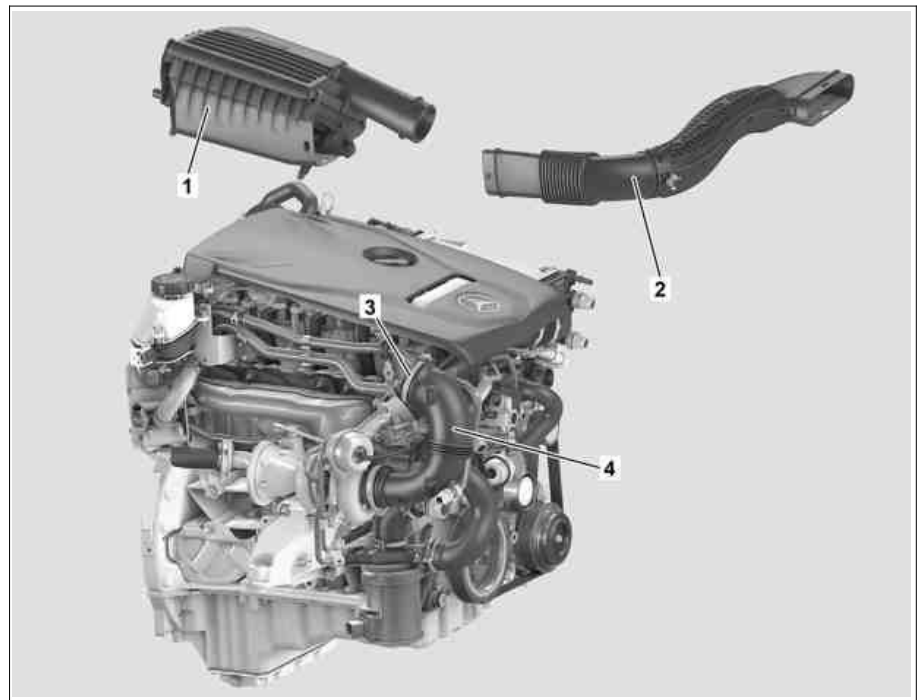

P09.10-2311-06

 Caution	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
	<b>Remove/install</b>		
1	Remove upper engine cover		
2	Release and disconnect electrical connection of the pressure sensor downstream of air filter		
3	Remove engine air intake duct (2)		
4	Loosen clamp (3)		
5	Remove air filter housing cover (1)		
6	Unfasten lower part of the air filter housing (1) from rubber guides	 <b>Installation:</b> Wet rubber guides with lubricant and press lower part of the air filter housing (1) evenly in the rubber guides. Lubricant	*BR00.45-Z-1032-06A
7	Unclip electrical line for oxygen sensor upstream of catalytic converter from the lower part of the air filter housing (1)		
8	Remove lower part of the air filter housing (1)		
	<b>Check</b>		
9	Check rubber guides for wear and damage and replace if necessary		
10	Install in the reverse order		

#### Repair materials

Number	Designation	Order number
BR00.45-Z-1032-06A	Lubricant	A 000 989 08 60