

AR82.20-P-1000LF

Remove/install overhead control panel control unit


09.05.2017

Model	205 (except 205.4)
Model	213
Model	217.3
Model	222
Model	253

Shown on model 222

1	Headliner
2	Plastic card
3	Lock
N70	Overhead control panel control unit


P82.20-4605-04

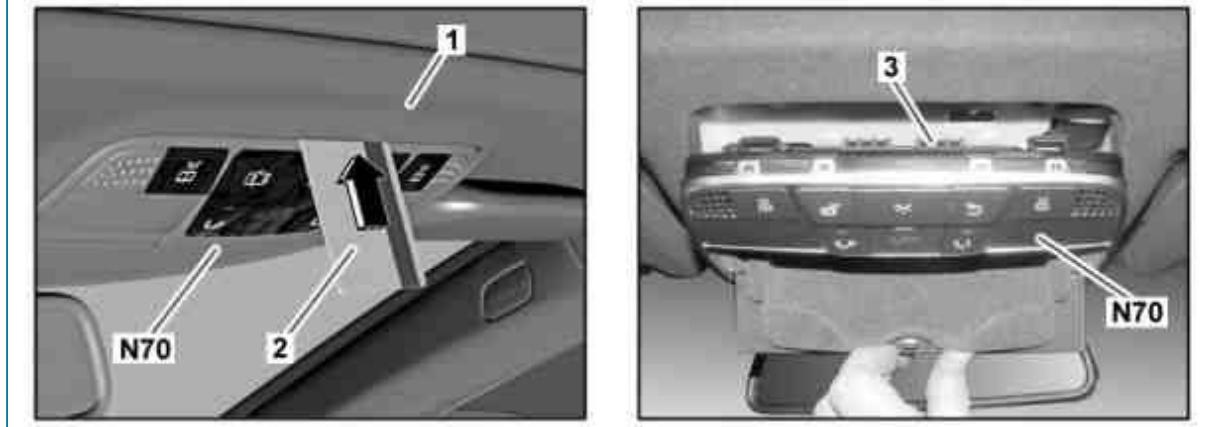

Shown on model 222

3	Lock
4	Electrical connector
N70	Overhead control panel control unit

P82.20-4127-12

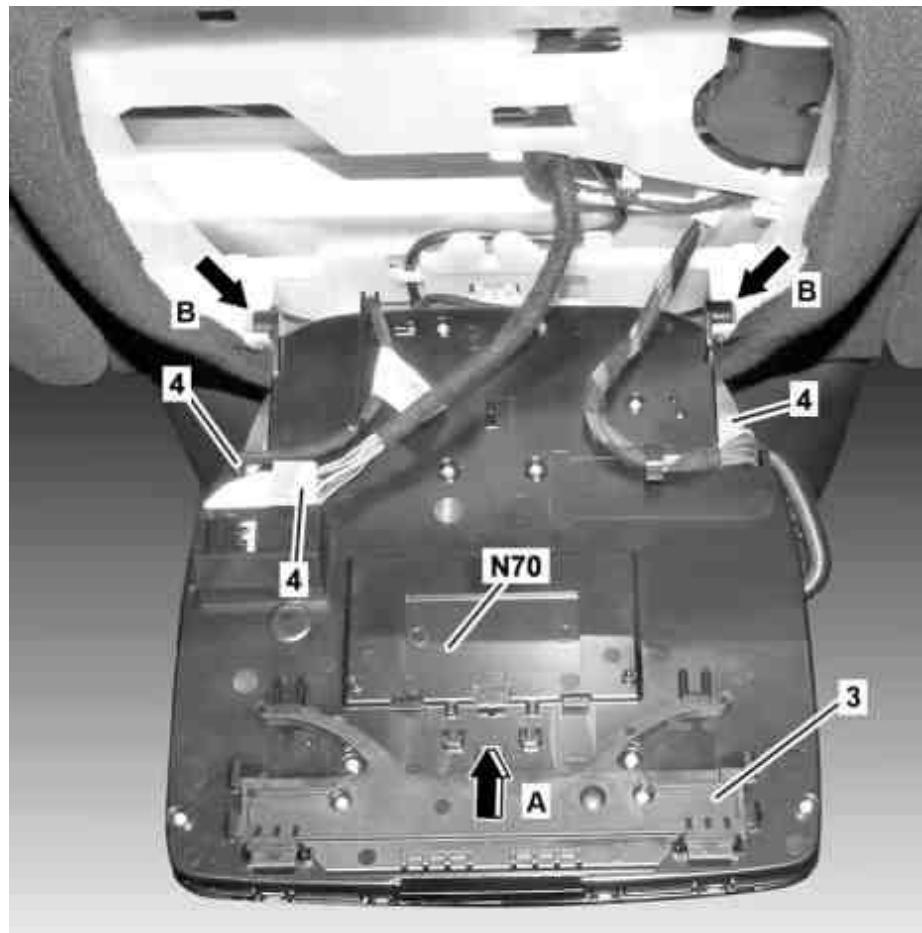

Topical notesseverity=N	Information on preventing damage to electronic components due to electrostatic discharge		■ Information on preventing damage to electronic components due to electrostatic discharge
	Remove/install		
1	Perform initial startup of overhead control panel control unit (N70)	When installing new overhead control panel control unit (N70).	
a			■ Connect STAR DIAGNOSIS and read out fault memory
2	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Insert a plastic card (2) or a similar object (approx. 2 mm thick) along a perpendicular line at the center between roof lining (1) and overhead control panel control unit (N70), unlock the lock (3) in direction of travel (arrow A) and fold overhead control panel control unit down (N70)		

4	Release and disconnect all electrical connectors (4) from overhead control panel control unit (N70)	i The number can vary according to the equipment.
5	Unhook overhead control panel control unit (N70) from the brackets (arrows B) and remove	
6	Reconfigure the bracket for taximeter	Model 213 with code 336 (Taximeter console in OCP) When installing new overhead control panel control unit (N70).
7	Install in the reverse order	