


AP77.20-P-7732CW	Panoramic sliding roof - clean and lubricate guide mechanism	17.12.2013
------------------	--	------------

MODEL	117, 156, 176, 204, 205, 242, 246 with CODE 413 (Panoramic glass roof with top sliding roof)
-------	---

P77.20-2647-08

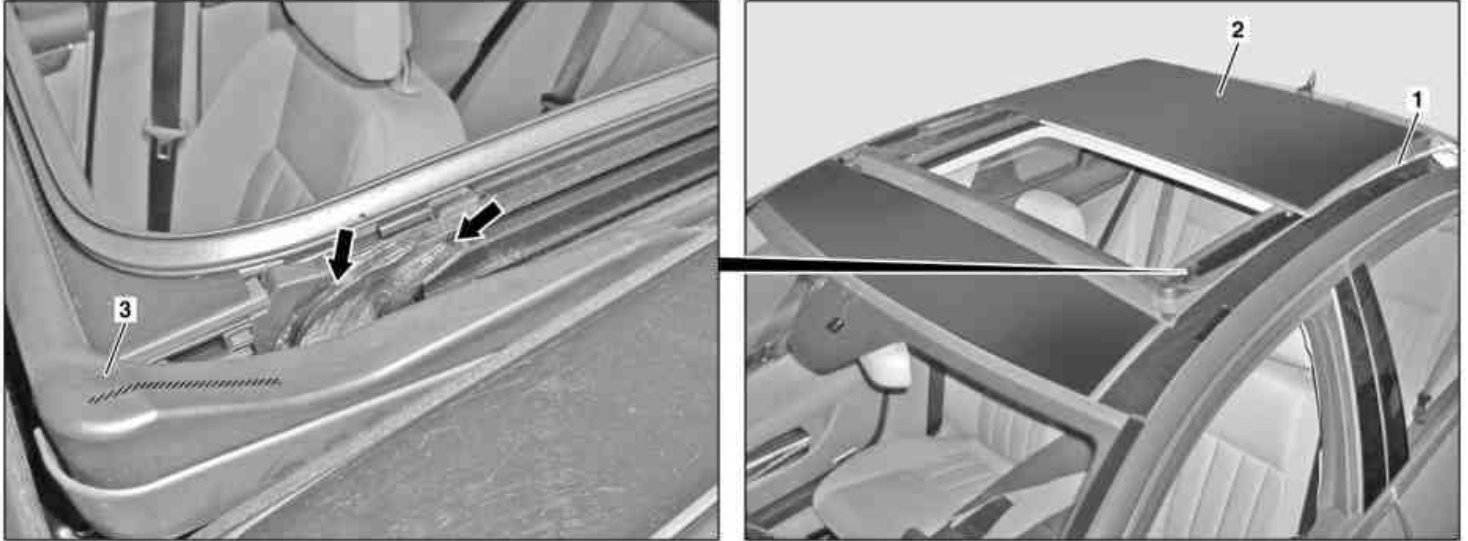

Shown on model 204.0

1	Rear guide rail	2	Panoramic sliding sunroof	3	Pivot arms
---	-----------------	---	---------------------------	---	------------

⚠ Danger	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	■ Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.
	Clean and lubricate		
1	Drip three drops of special sliding roof antifriction agent into each rear guide rail (1)	Special lubricant	*BR00.45-Z-1055-06A
2	Switch on ignition and open panoramic sliding roof (2)		
3	Use rag to clean crosshatched area of wind deflector pivot arms (3)		
4	Clean the upper and lower guide rails (arrows) over the entire length with rags		
5	Apply thin coating of grease to crosshatched area of wind deflector pivot arms (3)	Synthetic grease, sliding roof 500 g, DB supply specification 6827.60	*BR00.45-Z-1004-06A
6	Coat contact surfaces of upper and lower guide rails (arrows) over the entire length with a thin coating of grease	Synthetic grease, sliding roof 500 g, DB supply specification 6827.60	*BR00.45-Z-1004-06A
7	Perform function test on panoramic sliding roof (2)		
8	Remove excess grease		
9	Close panoramic sliding roof (2) and switch off ignition		

Repair materials

Number	Designation	Order number
BR00.45-Z-1004-06A	Synthetic grease, sliding roof 500 g, DB supply specification 6827.60	A 001 989 46 51
BR00.45-Z-1055-06A	Special lubricant	A 000 989 36 60