


AR68.40-P-0001LW	Remove/install inside rearview mirror	30.09.2016
------------------	---------------------------------------	------------

Model	205
Model	213
Model	253

P68.40-2217-07

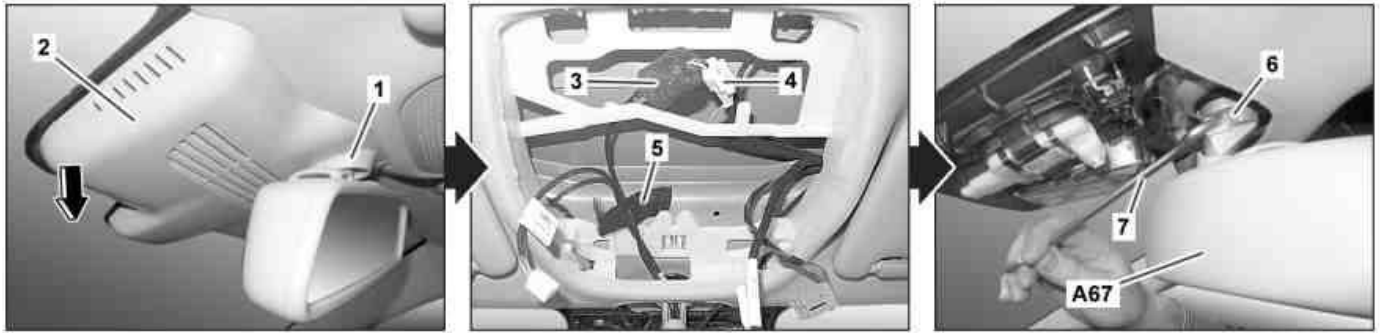

Shown on model 205.0

1	Cover	5	Duct tape
2	Cover	6	Mirror base
3	Foam grommet	7	Open end wrench
4	Electrical connector	A67	Inside rearview mirror

⚠ Danger !	Risk of injury caused by irritation of the skin, eyes and respiratory system through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.	■ Risk of injury caused by irritation of the skin, eyes and respiratory system through contact or inhalation of substances contained in the mirror lens.
⚡	Information on preventing damage to electronic components due to electrostatic discharge		■ Information on preventing damage to electronic components due to electrostatic discharge
⚠ ⚠	Remove/install		
1	Remove overhead control panel control unit	Model 205.0/1/2/3, 213, 253 Model 205.4	■ Remove/install overhead control panel control unit ■ Remove/install overhead control panel control unit
2	Unclip and remove cover (1)		
3	Unclip and remove cover (2) in direction of arrow		
4	Push back foam rubber grommet (3)	Model 205, 253 ⚠ Installation: Completely install foam rubber grommet (3) over electrical connector (4). Otherwise noise may occur.	
5	Disconnect electrical connector (4)	Model 205, 253	
6	Detach duct tape (5)	Model 205, 253	
7	Disconnect electrical connector from mirror taximeter	Model 213 with code 337 (Taximeter integr.in the rear-view mirror)	
8	Turn inside rearview mirror (A67) on mirror base (6) to right with open end wrench (7) and remove from mirror holder		
9	Adjust reading lamps of inside rearview mirror (A67) to steering variant	When replacing inside rearview mirror (A67).	
			■ Adjust reading lamp in inside rearview

10	Install in the reverse order	mirror to steering variant
----	------------------------------	----------------------------