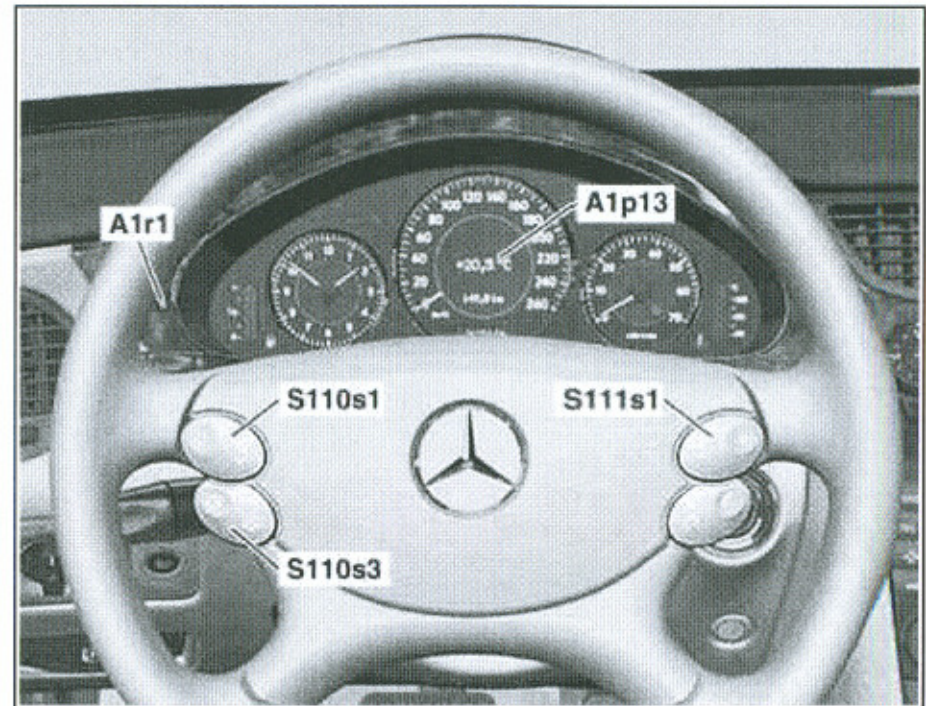



**MODEL 219.3****A1p13 Multifunction display****A1r1 Instrument illumination brightness control and reset button****S110s1 Scroll forward/back button****S110s3 System selection button****S111s1 Buttons + and - for setting specific functions and volume control**

P54.30-8170-11

	<b>Adjust</b>		
1	Turn key in ignition lock into position 1		
2	Press the system selection button (S110s3) repeatedly until the A1p13 basic display (speedometer or temperature display) or speed display is shown in the multifunction display		

3	Briefly press the instrument illumination dimmer and reset button (A1r1) 3 times	<b>i</b> An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).	
4	Press right scroll forward/back button (S110s1)	<b>i</b> The "Service menu" appears in the multifunction display (A1p13).	
5	Press left + and - buttons, setting of specific functions and volume control (S111s1) repeatedly until the "Confirmation" menu item is highlighted		
6	Press right system selection button (S110s3) to confirm.	<b>i</b> "Confirmation" appears in the multifunction display (A1p13) and the menu item "Complete service" is highlighted.	
7	Press right system selection button (S110s3) to confirm.	<b>i</b> "Service confirmed" appears in the multifunction display (A1p13).	
8	Press left system selection button (S110s3)	<b>i</b> The "Service menu" appears in the multifunction display (A1p13).	
9	Using the right + and - buttons, setting of specific functions and volume control (S111s1), select the menu item "Special work"		
10	Press right system selection button (S110s3) to confirm.		
11	Using the left + and - buttons, setting of specific functions and volume control (S111s1), select menu item "Service 3"		
12	Press right system selection button (S110s3) to confirm.		
13	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	<b>i</b> The number of selection options may vary depending on the engine.	

14	Press right system selection button (S110s3) to confirm.	 The message "Position confirmed" appears in the multifunction display (A1p13).	
15	Press the left system selection button (S110s3) repeatedly until the A1p13 basic display (speedometer or temperature display) or speed display is shown in the multifunction display		
16	Turn key in ignition lock into position 0		