

## MODEL 219.3

- A1p13 Multifunction display  
 A1r1 Instrument illumination brightness control and reset button  
 S110s1 Scroll forward/back button  
 S110s3 System selection button  
 S111s1 Buttons + and - for setting specific functions and volume control



P54.30-8170-11

	Resetting		
1	Close trunk lid, engine hood and doors	Vehicles with code (494) USA version	
2	Turn transmitter key in electronic ignition switch (EIS) control unit to position "1"		
3	Press system selection button (S110s3) repeatedly until basic display "speedometer or temperature display" or "speed display" is shown in multifunction display (A1p13)		
4	Briefly press the instrument illumination brightness control and reset button (A1r1) 3 times	<b>i</b> An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).	
5	Press right scroll forward/back button (S110s1)	<b>i</b> The "Service menu" appears in the multifunction display (A1p13).	
6	Press left + and - buttons, setting of specific functions and volume control (S111s1) repeatedly until the "Confirmation" menu item is highlighted		
7	Press right system selection button (S110s3) to confirm.	<b>i</b> "Confirmation" appears in the multifunction display (A1p13) and the menu item "Complete service" is highlighted.	
8	Press right system selection button (S110s3) to confirm.	<b>i</b> "Service confirmed" appears in the multifunction display (A1p13).	
9	Press left system selection button (S110s3)	<b>i</b> The "Service menu" appears in the multifunction display (A1p13).	
10	Using the right + and - buttons, setting of specific functions and volume control (S111s1), select the menu item "Special work"		
11	Press right system selection button (S110s3) to confirm.		
12	Using the left + and - buttons, setting of specific functions and volume control (S111s1), select menu item "Service 3"		
13	Press right system selection button (S110s3) to confirm.		
14	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	Vehicles with spark ignition engine and oil selection. <b>i</b> To achieve the maximum service interval, engine oil which complies with Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed.	
15	Press right system selection button (S110s3) to confirm.	<b>i</b> The message "Position confirmed" appears in the multifunction display (A1p13).	
16	Press left system selection button (S110s3) repeatedly until basic display "speedometer or temperature display" or "speed display" is shown in multifunction display (A1p13)		

17	Turn transmitter key in electronic ignition switch (EZS) control unit to position "0"		
----	---	--	--