
AR15.40-P-5032TYRemoving/installing the alternatorENGINE113.967 in MODEL 219.375ENGINE113.990 in MODEL 219.376

- 1 Terminal B+
- 2 Electrical connector
- 3 Bolts
- 4 Contact protection
- 5 Poly-V-belt
- G2 Alternator

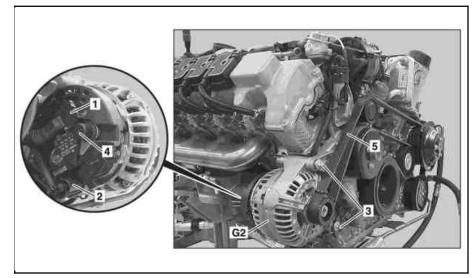

P15.40-2282-05

XX	Removing/installing				
⚠ Danger!	nger! Risk of death caused by vehicle slipping or toppling off the lifting platform. Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.		AS00.00-Z-0010-01A		
1	Open engine hood		AR88.40-P-1000TX		
⚠ Danger!	Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury through burns to skin and eyes from battery acid or when handling damaged lead- acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and safety glasses. Only pour battery acid into suitable and appropriately marked containers.	AS54.10-Z-0001-01A		
2	Disconnect ground cable from battery	Insulate clamping device of the ground line in order to prevent inadvertent contact with the ground point of the battery.	AR54.10-P-0003TX		
	Notes on battery	All models	AH54.10-P-0001-01A		
3	Remove right-hand intake air duct				
4	Remove Poly-V belt (5)	Model 219.375 Model 219.376	AR13.22-P-1202TY AR13.22-P-1202TZ		
5	Remove bottom engine compartment paneling		AR61.20-P-1105TX		
6	Remove protection against accidental contact (4) and dismount circuit B+ (1) from the alternator (G2)	Nm	*BA15.40-P-1001-01M		
7	Unplug electrical connector (2) from alternator (G2)				
8	Remove upper radiator crossmember				
9	Remove fan shroud	Model 219.375 Model 219.376	AR20.40-P-6800TY AR20.40-P-6800TZ		
¹⁰ ₩ ₩ F	Fit guard plate for radiator Guard plate for radiator/condenser		WF58.50-P-0110-01A		
11	Press coolant hoses to the side.	i To guarantee the trouble-free extension or retraction of the alternator (G2).			
12	Remove bolts (3)	Nm	*BA15.40-P-1005-01M		
13	Take alternator (G2) down and out				
14	Install in reverse order				
15	Read out fault memory and erase if required	i When the work is complete stored faults must be worked on in the diagnostic trouble code memories and erased.			
₩ ~ AD	Connect up STAR DIAGNOSIS and read out fault memory	STAR DIAGNOSIS diagnosis system	AD00.00-P-2000-04A *WH58.30-Z-1048-13A		

Number	Designation			Engine 113.967 in model 219	Engine 113.990 in model 219
BA15.40-P-1001-01M	Nut forcircuit B+ on alternator		Nm	18	18
BA15.40-P-1005-01M	Self-grooving screw alternator to timing case	Thread not pre- tapped	Nm	60	60
		Thread pre-tapped	Nm	45	45

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00