



## **Suspension - Front Axle Creaking Noises**

**Notes** 

Date: November 2, 2007

Order No.: P-B-32.20/58

Supersedes:

Group: 32

SUBJECT:


All Model 203 Vehicles, Up to VIN A378000, F300000 and R063000

Creaking Noises from Area of Front Axle When Suspension Compresses/Expands


If you receive customer reports in the above model vehicles of a creaking noise from the front axle area when the <u>suspension</u> is compressed or expanded, perform the following.

**Note:** This noise may be caused by the wearing out of the rubber mounts located on the front axle torsion bar. The noise may occur more at higher temperatures.

- 1. Remove the lower engine paneling. Refer to WIS document AR61.20-P-1105P.
- 2. Remove the <u>torsion bar</u> on the front axle. Refer to WIS document AR32.20-P-0300P. If the vehicle has xenon headlamps, detach the linkage from the level sensor.
- 3. Thoroughly clean the torsion bar.

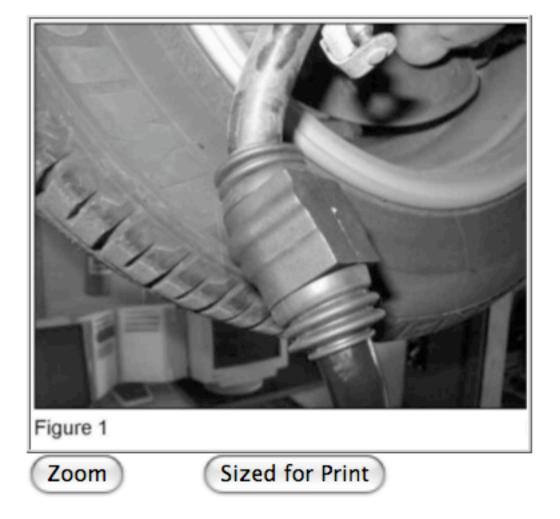


 Preinstall both rubber mounts with seal boots and slide them onto the torsion bar (Figure 1). Take note of the installation position.

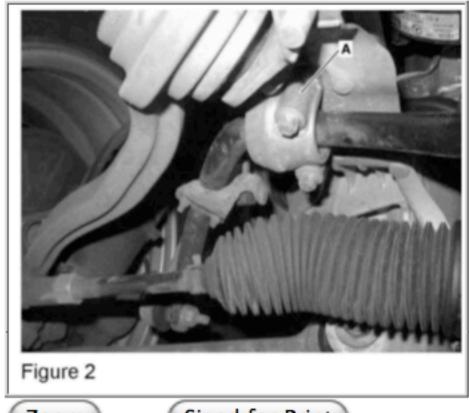

Zoom

Sized for Print

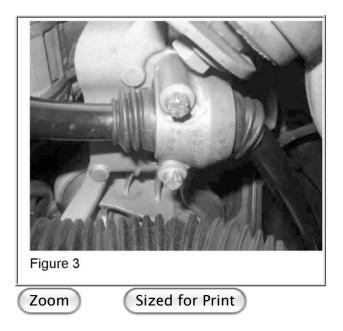

- 5. Screw on both caps for the rubber mounts (Figures 2 and 3). Use a new bracket if the torsion bar diameters are 20 mm and 21 mm.
- 6. Reinstall the torsion bar and lower engine paneling in reverse order.

Qty.	Part Name	Part Number
1	Bracket (only for torsion bar diameters of 20, 21 and 23 mm)	A203 323 11 40
1	Bracket (only for torsion bar diameters of 20, 21 and 23 mm)	A203 323 12 40
2	Rubber mount (for torsion bar diameter of 20 mm)	A203 323 20 85
2	Rubber mount (for torsion bar diameter of 21 mm)	A203 323 21 85
2	Rubber mount (for torsion bar diameter of 22 mm)	A203 323 22 85
2	Rubber mount (for torsion bar diameter of 23 mm)	A203 323 25 85
4	Protective cap	A203 327 00 90

Zoom Sized for Print

## Parts Information

**Note:** The following allowable labor operations should be used when submitting a warranty claim for this repair. This information has been generated on November 2, 2007. Please refer to Netstar --> Star TekInfo --> Star Time for the most current labor time allowance.