



Mercedes-Benz

C-Klasse	Schließanlage mit Fernbedienung
C-class	Locking system with remote control
Classe C	Système de fermeture avec télécommande
Clase C	Cierre centralizado con mando a distancia
Classe C	Dispositivo de fecho com telecomando
Classe C	Chiusura con telecomando
C-klasse	Sluitsysteem met afstandsbediening
C-klasse	Låsesystem med fjernbetjening
C-klassen	Låssystem med fjärrmanövrering
C-sarja	Keskuslukituksen kaukokäyttö
Класс C	Система замков с устройством инфракрасного дистанционного управления
الفئة C	نظام الغلق بالتشغيل عن بعد

Your vehicle is equipped with a modified locking system with infrared remote control and immobilizer. This has resulted in a change in the operation in comparison to the description in the owner's manual.

Only the changes are described on the following pages. Everything else is described in the owner's manual.

Vehicle keys

The vehicle is equipped with:
2 remote controls with folding key
1 spare key (flat key).

Infrared remote control

The receiver is located in the interior mirror.

Point the transmitter output on the remote control at the receiver in the interior mirror and press the transmit key.

The red indicator lamps in the interior mirror and driver's door handle flash when the car is locked and the green indicator lamps flash when the car is unlocked.

Note:

Since the receiver in the interior mirror can be actuated from all sides, the receivers in the driver's door handle and next to the trunk lock are no longer installed.

Immobilizer

If the engine cannot be started and the red and green indicator lamps in the interior mirror flash alternately, lock the vehicle with the remote control and unlock again.

If the engine still cannot be started, a malfunction is present. Notify a Mercedes-Benz service station.

Locking luggage compartment separately

The luggage compartment lid can be locked and unlocked separately with the key. It remains locked even when the vehicle is unlocked centrally with the remote control.

Emergency operation of the door

If it is not possible to unlock the car because the batteries of the remote control are empty, remove the cap from the lock of the front passenger door and unlock the front passenger door with the key in order to get access to the replacement batteries.

Closing side windows and tilting/sliding sunroof with the remote control

For safety reasons, it is only possible to close the side windows and the tilting/sliding sunroof when close to the car.

Interior mirror

The receiver for the infrared remote control is located on the interior mirror. This has made it necessary to change the day/night adjustment for the interior mirror.

Interior mirrors with manual day/night adjustment:

Turn knob on bottom of mirror to switch to night setting.

Interior mirrors with automatic day/night adjustment:

The knob on the bottom of the mirror cannot be turned.

The mirror switches automatically to the day/night setting.

Caution!

Accident hazard!

The interior mirror does not switch to the day position when the transmission is shifted into reverse.

Jump-starting

If it is not possible to unlock the car with the remote control because the vehicle battery is discharged, the car can be unlocked with the key.

If the car is then started by using the battery of another vehicle, the car must first of all be unlocked with the remote control after disconnecting the jump-starting cables.

Loss of remote control or spare key

Report loss to vehicle insurance company immediately.

Replacement is only possible through a Mercedes-Benz service station.

Replacement requires a great deal of time. For this reason we recommend carrying both remote controls with you on trips.

Low battery warning display

Replace the batteries in the remote control as quickly as possible when the red and green indicator lamps flash simultaneously on the interior mirror and in the driver's door handle for approx. 30 seconds when the car is locked and unlocked.

The batteries for the remote control can also be checked:

When the transmit key is held depressed for longer than 1 second the battery indicator lamp next to the transmitter output comes on momentarily – indicating the batteries are okay.

If the indicator light does not come on briefly, replace the batteries.

Remote control – spare batteries

Spare batteries for the remote control are located in the glove box.

The engine can only be started when the vehicle has been unlocked with the remote control. For this reason always leave the spare batteries in the vehicle for replacement at any time.

It is no longer necessary to replace the batteries every two years as the remote control now has a battery change indicator.

Synchronizing locking system

If it is not possible to lock or unlock the car, the system must then be synchronized.

To do this, point the transmitter of the remote control at the receiver in the interior rear-view mirror and press transmitter button twice briefly. Turn the key in the steering lock into driving position within about 30 seconds.

After this, the locking system again operates normally.