


MODEL 163.113,  
163.154 /172 as of 1.9.99,  
163.128 /157 /174 /175  
Right footwell

- 1 Circuit 30 cable
- 2 Circuit 15R cable
- 3 Circuit 31 cable
- 4 Tie strap
- 5 Connector
- 6 Connector
- 7 Plastic nuts

- F2 Fuse and module box in right front footwell
- W29/2 Ground (right A-pillar)

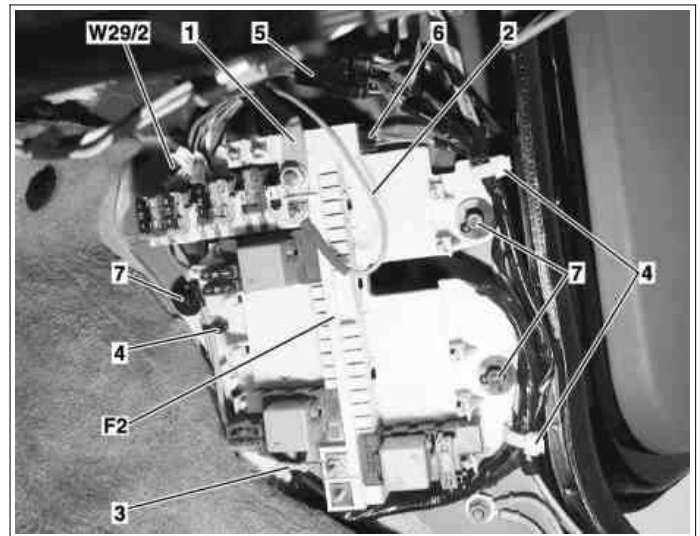

P54.15-2211-11

☒ ☒	Remove/install		
1	Disconnect ground cable of battery		AR54.10-P-0003A
2	Remove cover below instrument panel	<ul style="list-style-type: none"> <li><span style="border: 1px solid black; padding: 2px;">i</span> Right-hand drive vehicle.</li> <li><span style="border: 1px solid black; padding: 2px;">i</span> Left hand drive vehicle.</li> </ul>	AR68.10-P-1500GH AR68.10-P-1520GI
3	Remove paneling in footwell.	<span style="border: 1px solid black; padding: 2px;">i</span> Only right-hand side.	AR68.30-P-4010GH
4	Unscrew circuit 30 cable (1) and circuit 15R cable (2) from fuse and relay module in front right footwell (F2).	<span style="border: 1px solid black; padding: 2px;">i</span> <b>Installation:</b> ensure that lines are routed properly.	
5	Remove cable straps (4)	<ul style="list-style-type: none"> <li><span style="border: 1px solid black; padding: 2px;">⚠</span> Do not damage wiring harness!</li> <li><span style="border: 1px solid black; padding: 2px;">i</span> <b>Installation:</b> ensure that lines are routed properly.</li> </ul>	
6	Unplug connector (5) and remove connector at A-pillar	<span style="border: 1px solid black; padding: 2px;">i</span> Slacken retaining lug on back of connector and push connector towards door.	
7	Unplug connector (6).		
8	Unscrew nut from ground (right A-pillar) (W29/2) and detach circuit 31 cable (3) from ground.		
9	Unscrew plastic nuts (7).		
10	Remove fuse and relay module in right front footwell (F2) with wiring harness.		
11	Install in the reverse order		