

Document number: pe82.10-p-2000-97fbc

Document title: Wiring diagram of exterior lights

Code: Designation: Position:


A0	Use of wiring diagrams	72L
B22/7	Left rear level sensor	32L
B22/8	Left front level sensor	26L
CAN PER	Peripherals CAN	43K
Code 460	Canada version	6F
Code 460	Canada version	54A
Code 460	Canada version	58A
Code 483	Dynamic handling package 2.0 incl. ADS+	23G
Code 483	Dynamic handling package 2.0 incl. ADS+	28F
Code 488	Chassis with steel/air suspension	23G
Code 488	Chassis with steel/air suspension	28G
Code 489	AIR BODY CONTROL	23G
Code 489	AIR BODY CONTROL	28G
Code 492	AMG Performance suspension	23G
Code 494	USA version	6G
Code 494	USA version	54A
Code 494	USA version	58A
Code L	LEFT-HAND DRIVE	23F
Code L	LEFT-HAND DRIVE	40G
Code R	RIGHT-HAND DRIVE	35G
E1	Left front lamp unit	4A
E1	Left front lamp unit	12A
E1	Left front lamp unit	15A
E1	Left front lamp unit	20A
E1	Left front lamp unit	28A
E1	Left front lamp unit	36A
E1	Left front lamp unit	44A
E1	Left front lamp unit	52A
E1	Left front lamp unit	60A
E1	Left front lamp unit	68A
E1b1	Left active curve illumination position sensor	67F
E1b2	Left light distribution position sensor	69F
E1e1	Left high beam	36F
E1e13	Left parking light, standing light and daytime running light	44F
E1e15	Left low beam (short range)	38F
E1e16	Left low beam (long range)	40F
E1e23	Left front ambient light	53F
E1e5	Left front turn signal lamp	47F
E1e6	Left front side-marker lamp	55F

Document number: pe82.10-p-2000-97fbc


Document title: Wiring diagram of exterior lights

Code: **Designation:** **Position:**

E1e9	Left cornering illumination	50F
E1m1	Left headlamp range adjustment actuator motor	59F
E1m2	Left active curve illumination actuator motor	62F
E1m3	Left light distribution actuator motor	65F
E1m4	Left LED signaling lights actuation module fan motor	57F
E1m5	Left LED driving lights actuation module fan motor	42F
E1n7	Actuation module for left front exterior lights LED	4B
E1n7	Actuation module for left front exterior lights LED	12B
E1n9	Left headlamp control unit	15B
E1n9	Left headlamp control unit	20B
E1n9	Left headlamp control unit	28B
E1n9	Left headlamp control unit	36B
E1n9	Left headlamp control unit	44B
E1n9	Left headlamp control unit	52B
E1n9	Left headlamp control unit	60B
E1n9	Left headlamp control unit	68B
K40/8	Engine fuse and relay module	3L
K40/8	Engine fuse and relay module	16L
K40/8f108	Fuse 108	2L
K40/8f110	Fuse 110	15L
N10/6	Front SAM control unit	10L
N10/6	Front SAM control unit	21L
W9	Left front ground point (at lamp unit)	9H
X25/7	Engine compartment/frame floor assembly electrical connector	29J
X25/7	Engine compartment/frame floor assembly electrical connector	38J
X30/27	Peripherals CAN (CAN PER) potential distributor electrical connector	43L
X62/32	Rear axle electrical connector, left distributor	32H
Z194/4z1	Left front lamp unit circuit 30 connector sleeve	19H
Z194/5z1	Right front lamp unit circuit 30 connector sleeve	8H
Z194/6z1	Left position lamp connector sleeve	1H
Z194/7z1	Right position lamp connector sleeve	15H

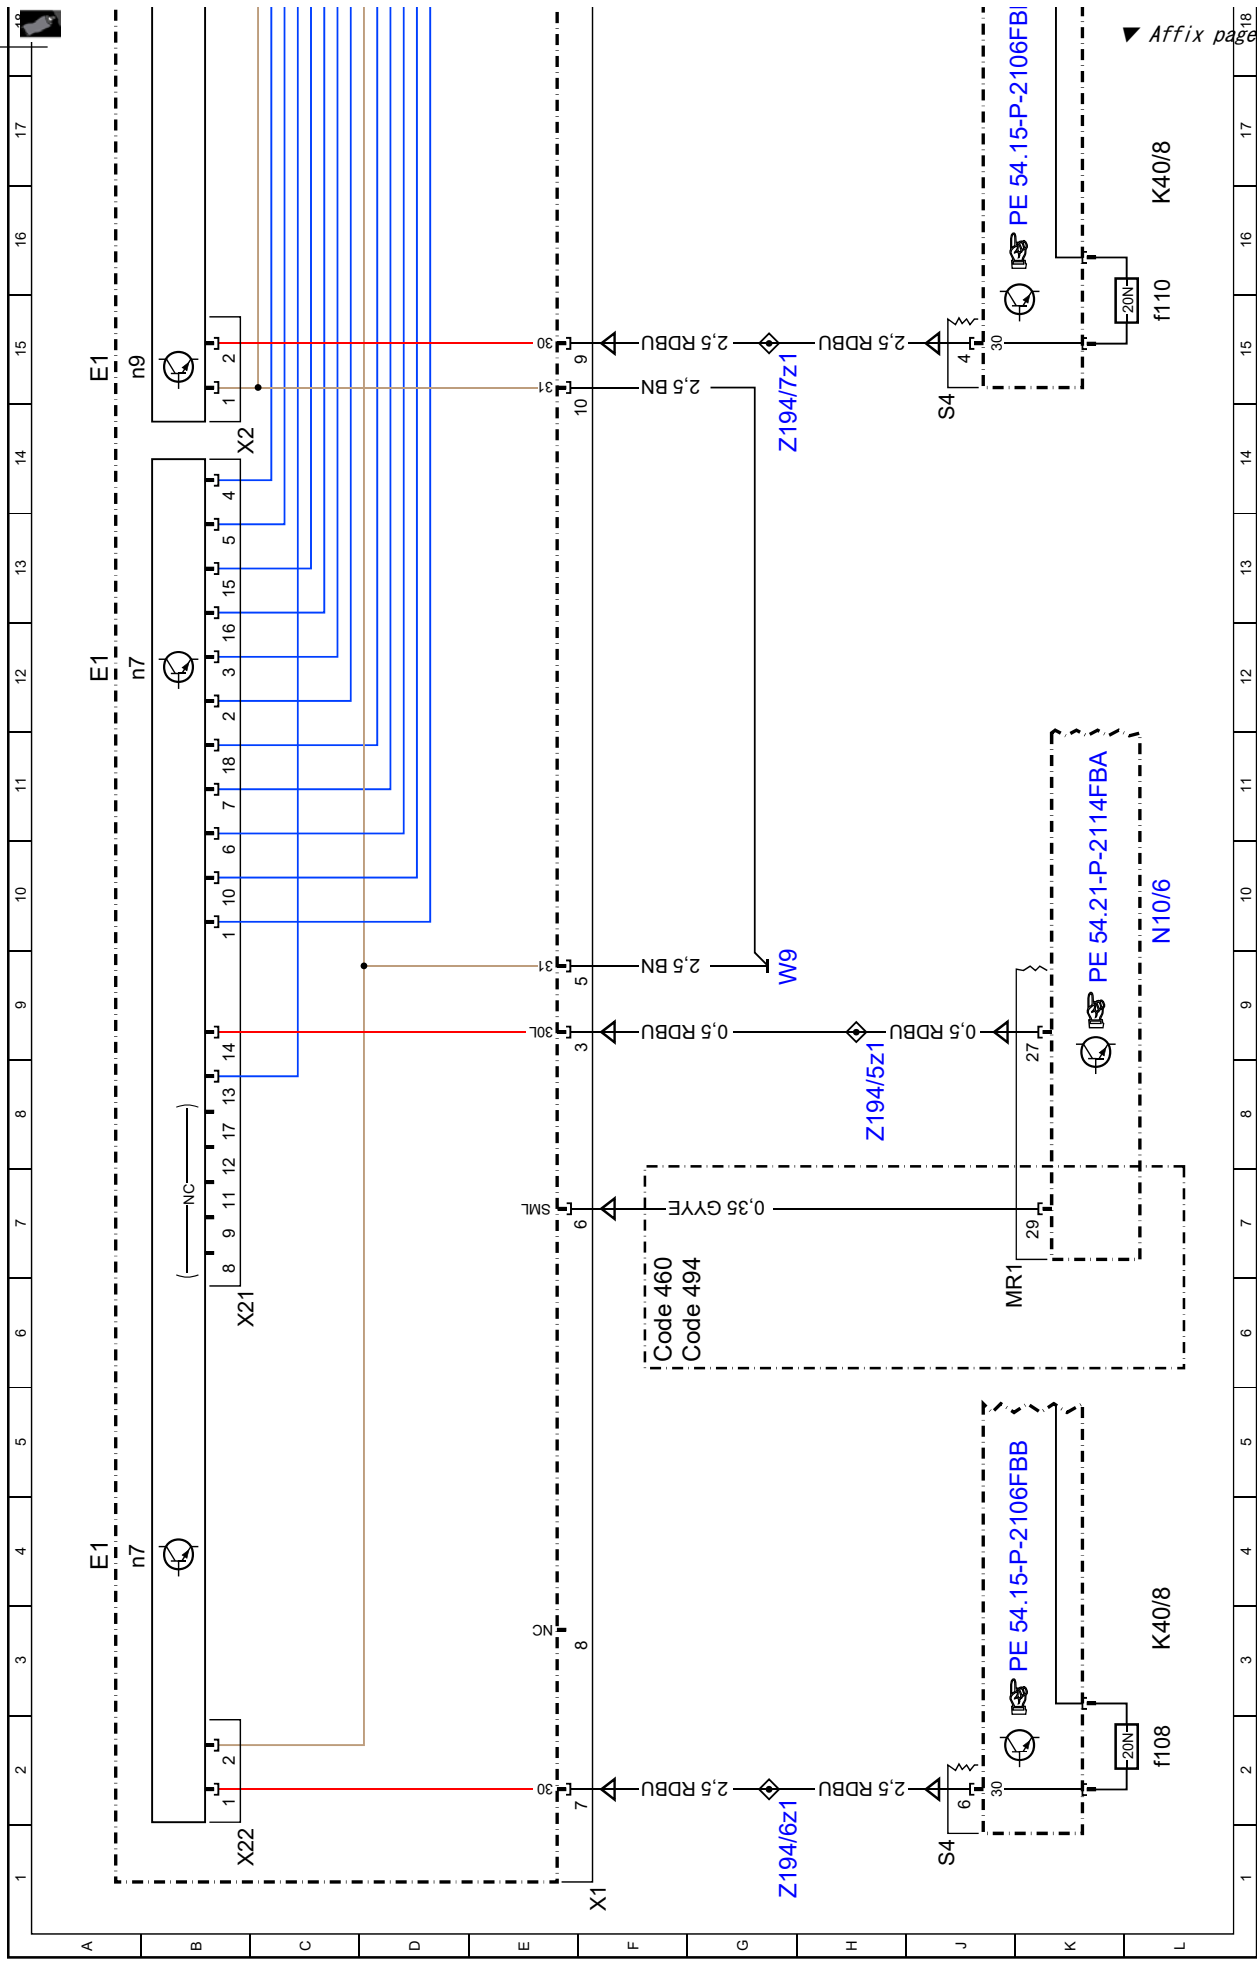


▼ Affix page 2 here ▼

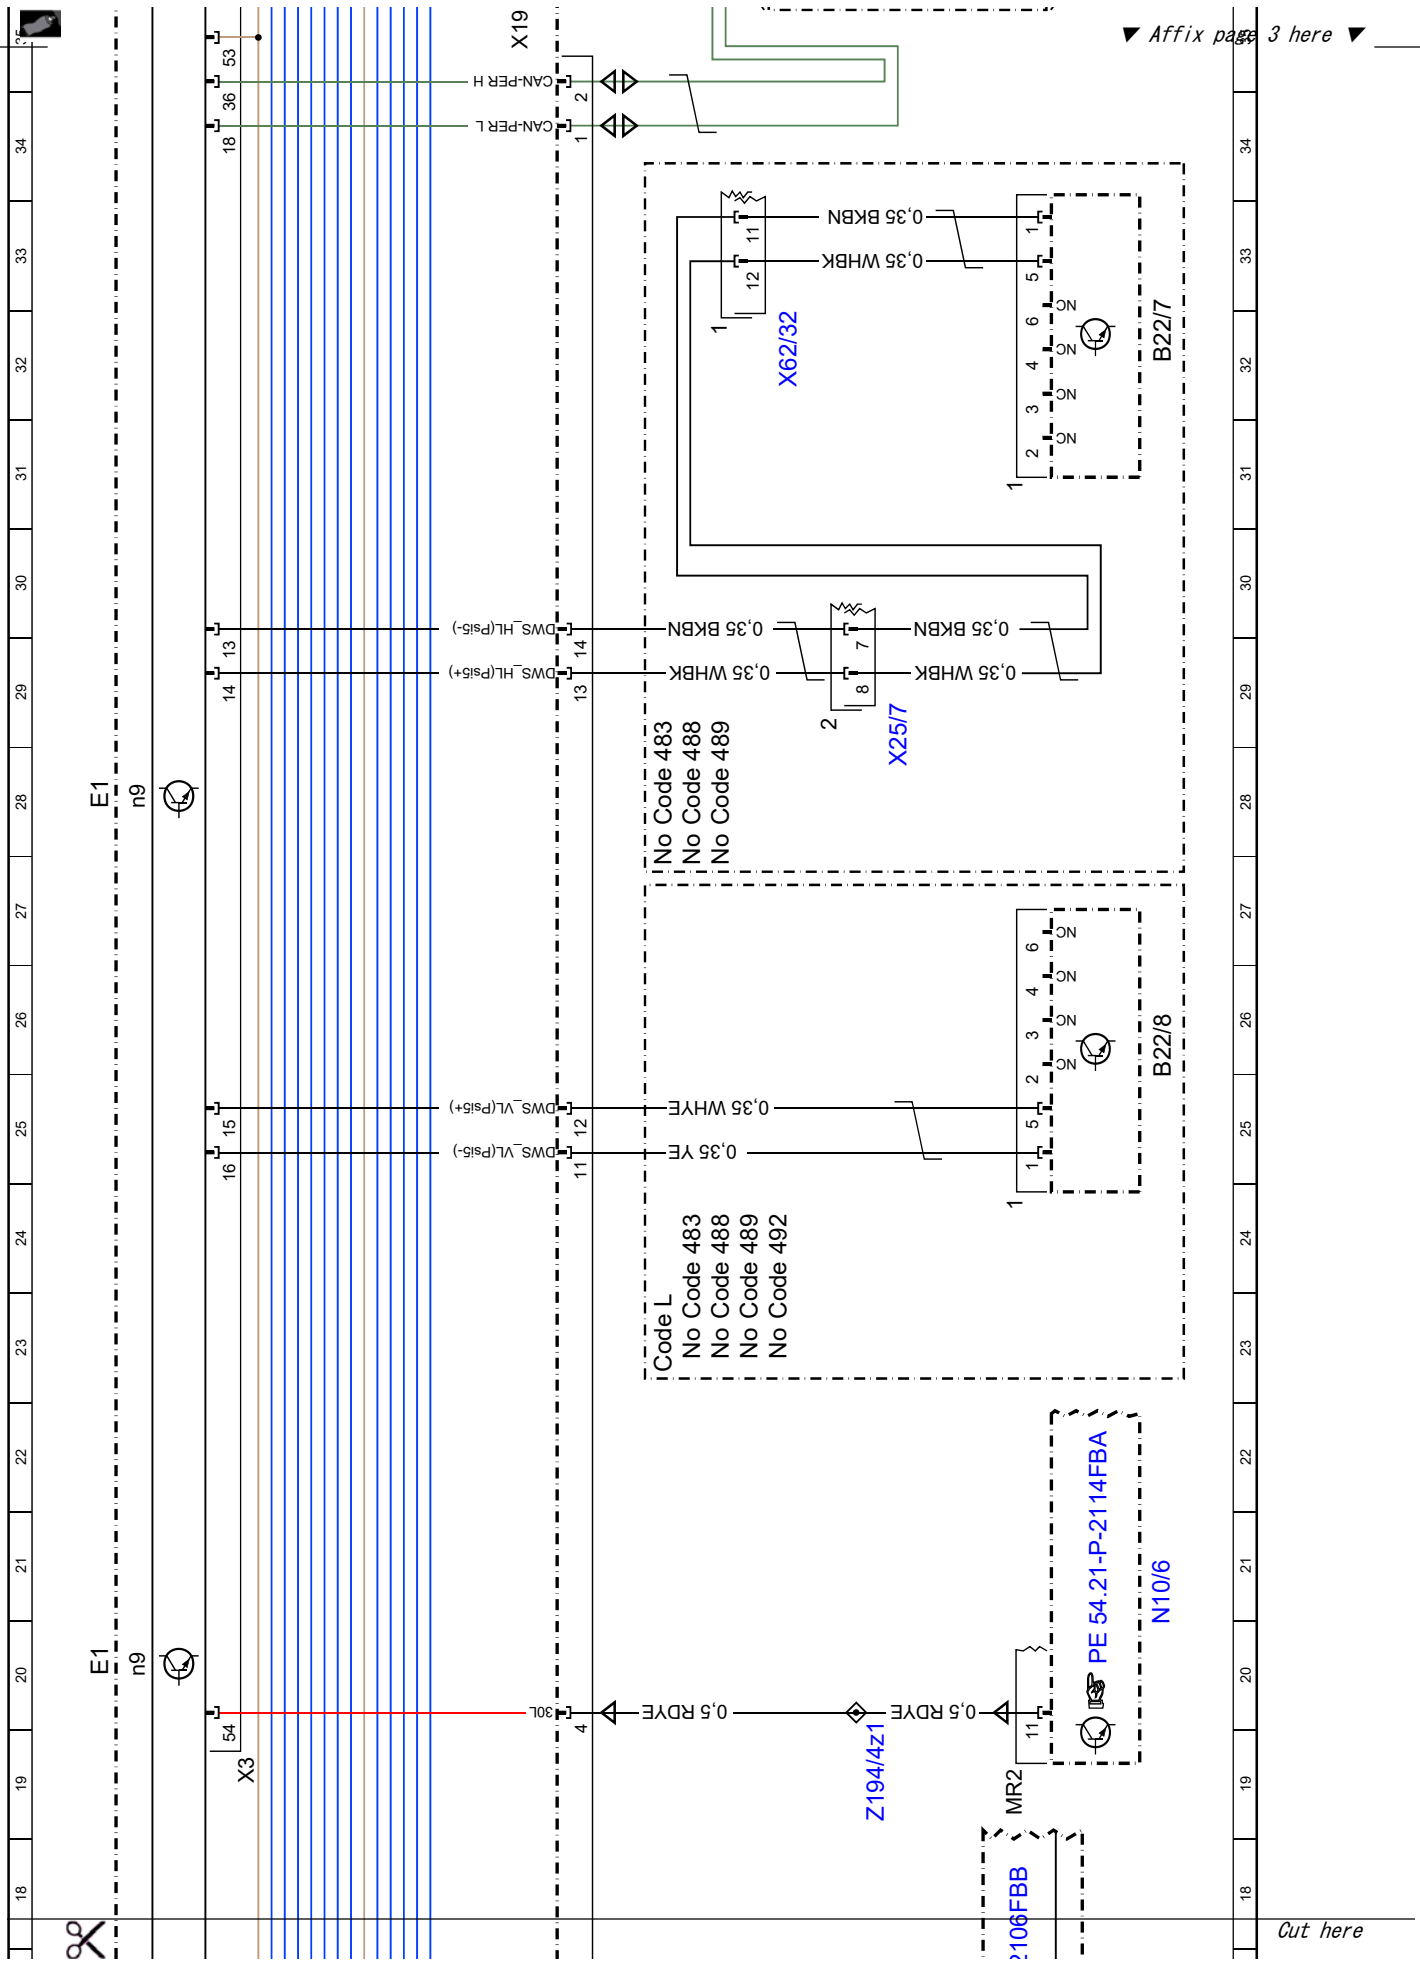


▼ Affix page 3 here ▼

Cut here

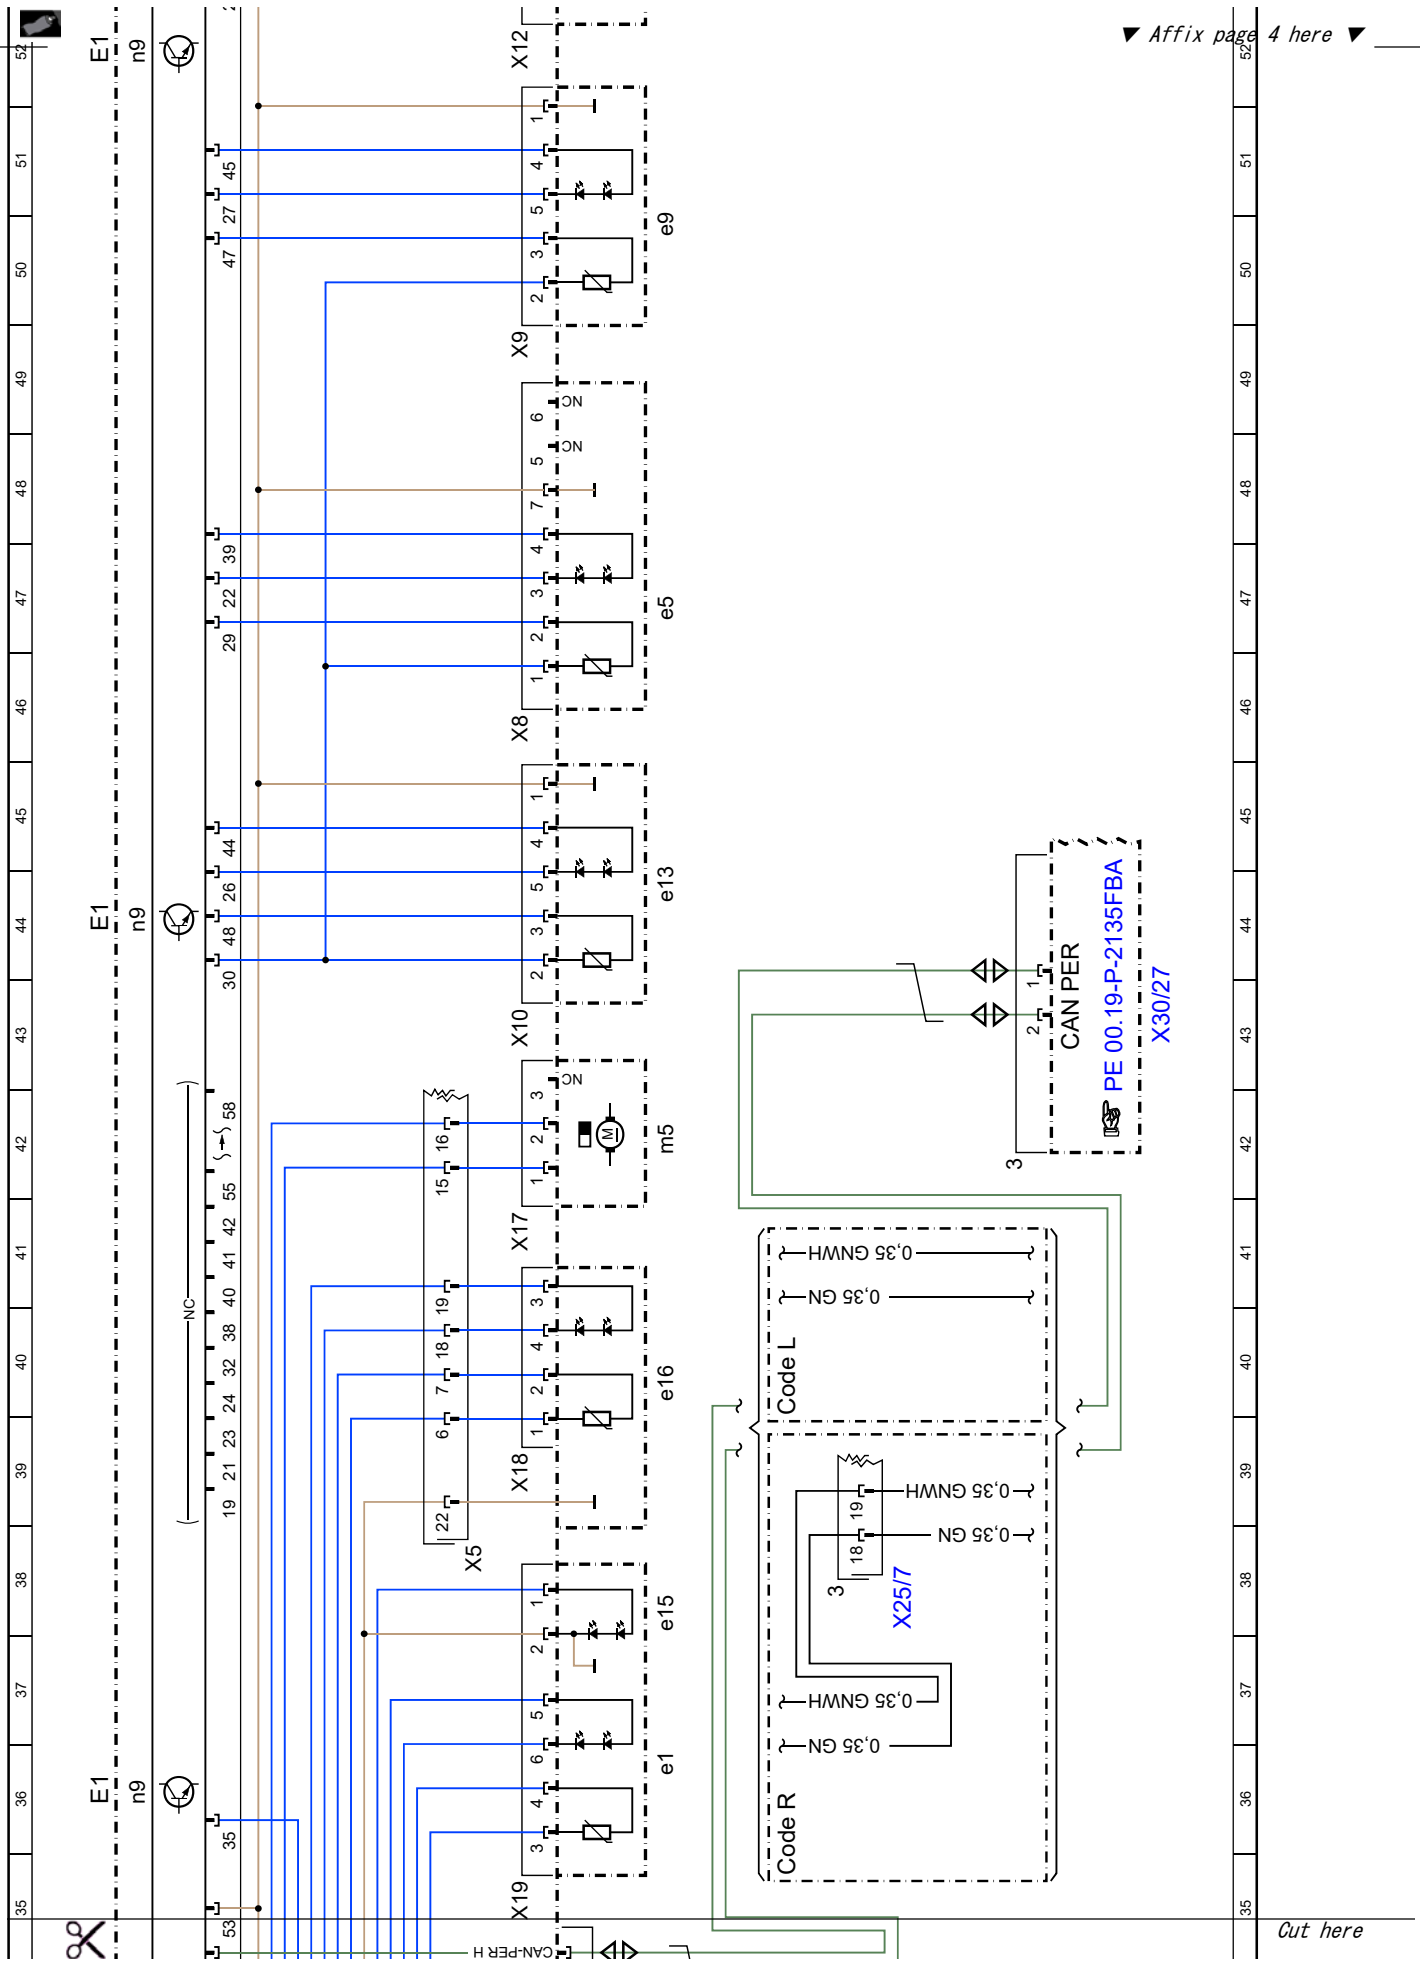

▼ Affix page 4 here ▼

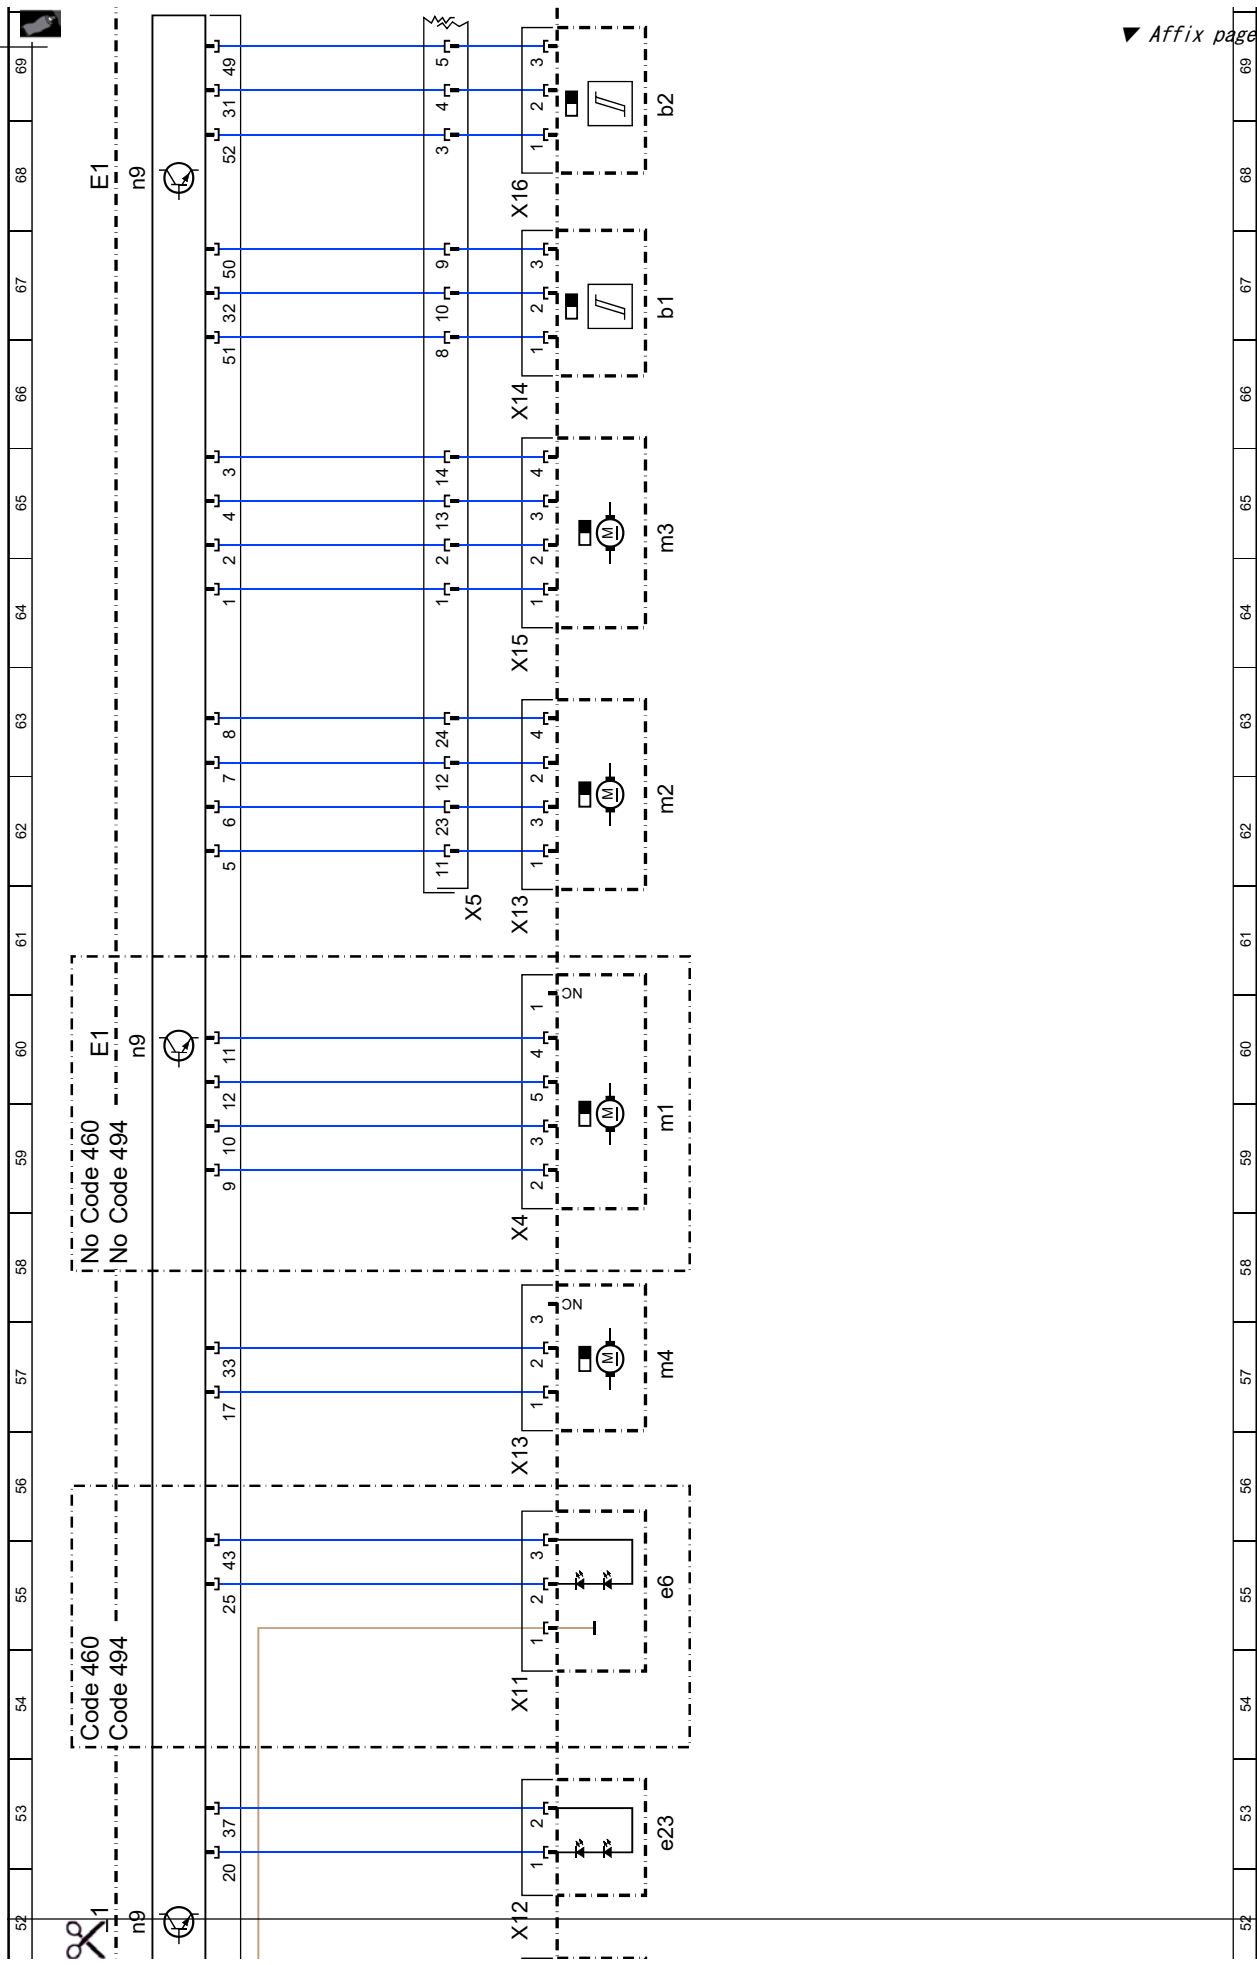

▼ Affix page 5 here ▼

Cut here

