


Shown on left front seat

- 1 Cover
- 2 Back shell
- 3 Cover
- 4 Nuts
- 5 Sidebag unit
- 6 Electrical connector
- 7 Electrical connector

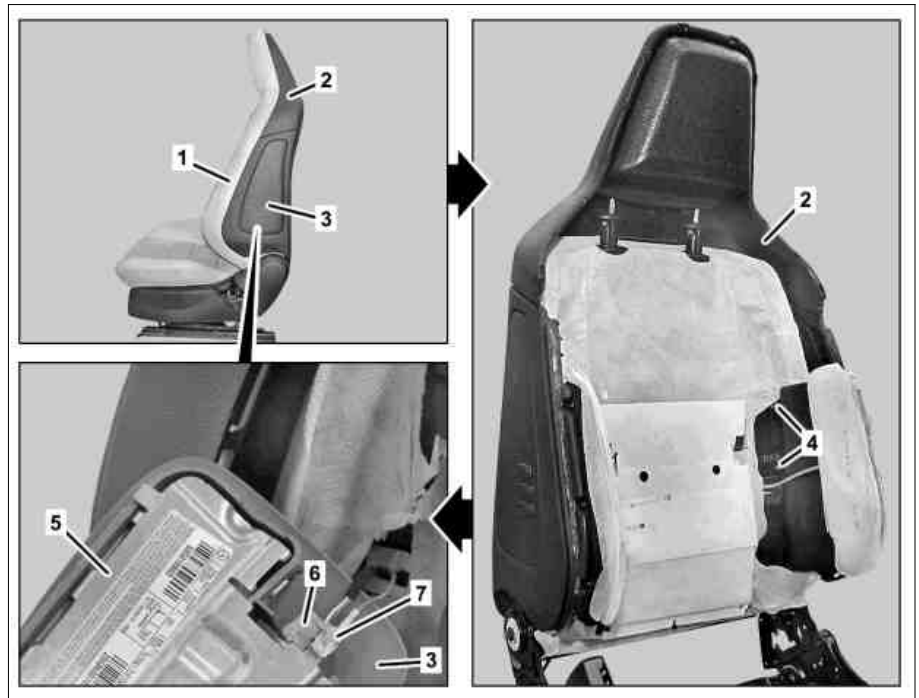

P91.60-3974-06

	Remove/install		
Danger!	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
	Legal requirements on handling and storing airbags and emergency tensioning retractor units		AH91.00-P-0004-01A
1	Remove left or right front seat		AR91.10-P-1000CW
2	Remove cover (1) with backrest padding		AR91.10-P-1095CW
3	Unscrew nuts (4)		*BA91.60-P-1008-01M
4	Remove cover (3) with sidebag unit (5) from back shell (2) until electrical connectors (6, 7) can be disconnected		
5	Disconnect electrical connectors (6, 7)		
6	Remove cover (3) with sidebag unit (5)	If sidebag unit (5) is replaced, the defective sidebag unit (5) must be disposed of properly. Refer to: ↓ Notes on disposing of airbag and emergency tensioning retractor units	OS91.00-P-0001-01A
7	Unclip cover (3) from sidebag unit (5)	Only when replacing sidebag unit (5).	
8	Install in the reverse order		
9	Check supplemental restraint system (SRS) with STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	After replacing sidebag unit (5).	AD00.00-P-2000-04A

Airbag

Number	Designation	Model 204.0/2/9

BA91.60-P-1008-01M	Fastener, sidebag unit to backrest frame	Nm	6
--------------------	--	----	---