
Model 204.077/277/377

Model 212.074/075/076/077/092/274/275/276/277/292

except code B07 (Ceramic brake system)


Model 218.374/375/376/392/974/975/976/992

except code B07 (Ceramic brake system)

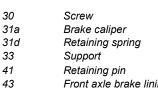

43 Front axle brake linings S10/2 Right front brake wear sensor S10/2x1 Right front brake wear sensor

electrical connector

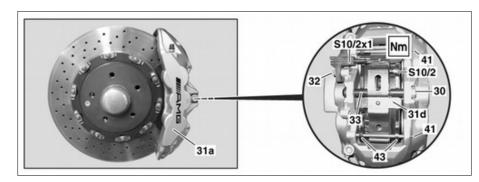

P42.10-2405-04


31a	Brake caliper
35	Bolts

43 Front axle brake linings

61 Brake disk

S10/2 Right front brake wear sensor S10/2x1 Right front brake wear sensor

electrical connector

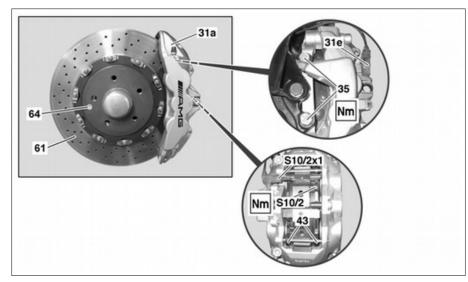

P42.10-2404-05

⚠ Warning	Risk of injury . Skin or eye injuries may result when handling hot or glowing objects.	Wear protective gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
⚠ Caution	Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contac with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
	Notes on repairs to brake system		AH42.00-P-0003-01A
	Brake fluid notes		AH42.50-P-0001-01A
i	Notes on safety-relevant components		AH00.00-Z-0019-01A
W	Clean		
1	Clean the area around the cap of the brake fluid reservoir	Assembly cleaner	*BR00.45-Z-1028-04A
X	Remove		
2	Unscrew cap of brake fluid reservoir and extract some brake fluid	i This prevents the brake fluid reservoir overflowing when the brake piston is pushed back.	
3	Remove corresponding front wheel		
⊯AP		Model 212.074/075/076/077/092/274/275/276/277/29 2	AP40.10-P-4050EW
		except code B07 (Ceramic brake system) Model 218.374/375/376/392/974/975/976/992	
r		except code B07 (Ceramic brake system)	A D 40 A 0 D 40500V4
FAP		Model 204.077/277/377	AP40.10-P-4050CW
4	Disconnect electrical connector of right front brake wear sensor (S10/2x1)		

	Notes on installing brake wear indicator contact sensors		AH42.10-P-0003-01CW
_		i Only available on right side.	*D. 40 40 D. 4000 404
5	Remove bolt (30) and remove support (33) of retaining spring (31d)	Bolt for anti-rattle spring support	*BA42.10-P-1006-10J
6	Drive out retaining pins (41) using punch and remove retaining spring (31d)	i Installation: Hammer in retaining pins (41 as far as the end stop. Ensure that retaining spring (31d) is correctly seated.)
7	Pull brakepads on front axle (43) out of brake caliper (31a)	i Installation: Only complete sets of front axle brakepads (43) approved by Mercedes-Benz may be installed. i Installation: Do not apply any brake paste or lubricants to brakepads on front axle (43) and brake calipers (31a).	
8	Press back brake piston using resetting device	i Secure remaining brake pistons to preventhem slipping out. Resetting device Wedge With sluggish brake pistons Replace brake caliper (31a).	*000589524300 *601589076300
9	Pull right front brake wear sensor (S10/2) out	When replacing the front axle brakepads (43)	AR42.10-P-0070CMG
	of pad backing plate of brake lining (43) Notes on installing brake wear indicator contact sensors	or the front right brake wear sensor (S10/2).	AH42.10-P-0003-01CW
		i Mark installation location of front right brake wear sensor (S10/2).	
4	Check		
10	Check retaining pins (41) and retaining spring (31d) for damage and condition	If there are problems Replace retaining pins (41) or retaining spring (31d).	
11	Check brakepads on front axle (43) for wear	(314).	
FFAP	and condition	Model 212.074/075/076/077/092/274/275/276/277/29 2	AP42.10-P-4252EW
le∓AP le∓AP		except code B07 (Ceramic brake system) Model 218.374/375/376/392/974/975/976/992 except code B07 (Ceramic brake system) Model 204.077/277/377 In event of damage or excessive wear	AP42.10-P-4252EL AP42.10-P-4252CW
		Replace brakepads on front axle (43). i Only complete sets of front axle brakepads (43) approved by Mercedes-Benz may be installed.	s
12	Check brake disk (61) for wear and condition		
₽ AP		In event of damage or excessive wear ↓	AP42.10-P-4256EW
		Replace brake disks (61) and brakepads on front axle (43).	AR42.10-P-0220CMG
		Only complete sets of brake disks (61) and front axle brakepads (43) approved by Mercedes-Benz may be installed.	d
13	Check brake caliper (31a) and brake piston dust boot for damage	If there are problems	
		Replace dust boot of brake piston or brake caliper (31a).	AR42.10-P-0070CMG
₽	Clean		
14	Clean contact surfaces of front axle brakepads (43) on brake caliper (31a)	Do not use sharp-edged or pointed objects. Otherwise the brake calipers (31a) or dust boots of the brake pistons may be damaged. Assembly cleaner	*BR00.45-Z-1028-04A
×	Install		
15	Check brake system for leaks		AR42.10-P-0100-01V

16	Install in the reverse order		
	vehicle due to a lack of braking effect when	Before starting the engine, actuate brake pedal several times until pressure is built up and maintained in the brake system.	AS42.50-Z-0002-01A
17	Operate brake pedal several times until brakepads on front axle (43) make contact with brake disks (61)	i Firm resistance should be noticeable at the brake pedal.	-
4	Check		
18	Check and correct fluid level in brake fluid expansion reservoir		
₩FAP			AP42.10-P-4210EW
19	Carry out brake test on the test stand		
₩AP			AP42.00-P-4290BA


Nm Front axle brake caliper

Number	Designation		204.077/277/377	MODEL 212.074/075/076/07 7/274/275/276/277 except CODE B07, MODEL 212.092/292
BA42.10-P-1006-10J	Bolt for anti-rattle spring support	Nm	30	30

Nm Front axle brake caliper

Number	Designation		MODEL 218.374/375/376/97 4/975/976 except CODE B07, MODEL 218.392/992
BA42.10-P-1006-10J	Bolt for anti-rattle spring support	Nm	30



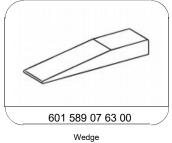

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Assembly cleaner	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 http://www.wuerth.de